



**1973-79 Ford F-Series/
1978-79 Bronco**
with Factory Air
**Gen 5 Evaporator Kit
(755685)**



18865 Goll St. San Antonio, TX 78266
Phone: 800-862-6658
Sales: sales@vintageair.com
Tech Support: tech@vintageair.com
www.vintageair.com



www.vintageair.com

Table of Contents

Cover..... 1

Table of Contents..... 2

Packing List/Parts Disclaimer..... 3

Information Page.....4

Wiring Notice..... 5

Engine Compartment Disassembly..... 6-7

Passenger Compartment Disassembly..... 8-10

Passenger Side Wheel Well Modification..... 11

Engine Compartment Passenger Side Inner Fender Modification, Lubricating O-rings,
Properly Seated O-ring Land..... 12

Evaporator Preparation..... 13-14

Firewall Cover Installation, Firewall Insulation..... 15

Defrost Duct Installation, Louver Hose Adapter Installation..... 16-17

A/C Hose Routing & Kick Panel Cover Installation..... 17-19

Evaporator Installation..... 20-22

A/C Hose Installation..... 23

Heater Hose & Heater Control Valve Installation..... 24

Drain Hose Installation..... 25

Duct Hose Routing..... 26

Wiring Installation..... 27-29

Control Panel Installation..... 30

Final Steps: Installation Check..... 31

Glove Box Installation, Final Steps..... 32

Quality Crimp Guideline..... 33

Gen 5 Wiring Diagram..... 34

Gen 5 Wiring Connection Instructions..... 35

Operation of Controls..... 36

Troubleshooting Guide..... 37

Troubleshooting Guide (Cont.), Advanced Diagnostics and Troubleshooting Guide..... 38

Packing List..... 39



A detailed tech video outlining the installation process for the Gen IV kit (some parts may differ from the Gen 5 kit) is available on Vintage Air’s YouTube channel at <https://bit.ly/3dBfx5X>. Viewing the tech video along with the written instructions will provide the installer the most detailed installation procedure.



www.vintageair.com

Packing List: Evaporator Kit (755685)

No.	Qty.	Part No.	Description
1.	1	765200	Gen 5 Magnum Max Module with 404 ECU
2.	1	795685	Accessory Kit


**** Before beginning installation, open all packages and check contents of shipment. Please report any shortages directly to Vintage Air within 15 days. After 15 days, Vintage Air will not be responsible for missing or damaged items.**

1



**Gen 5 Magnum Max
Module with 404 ECU
765200**

2

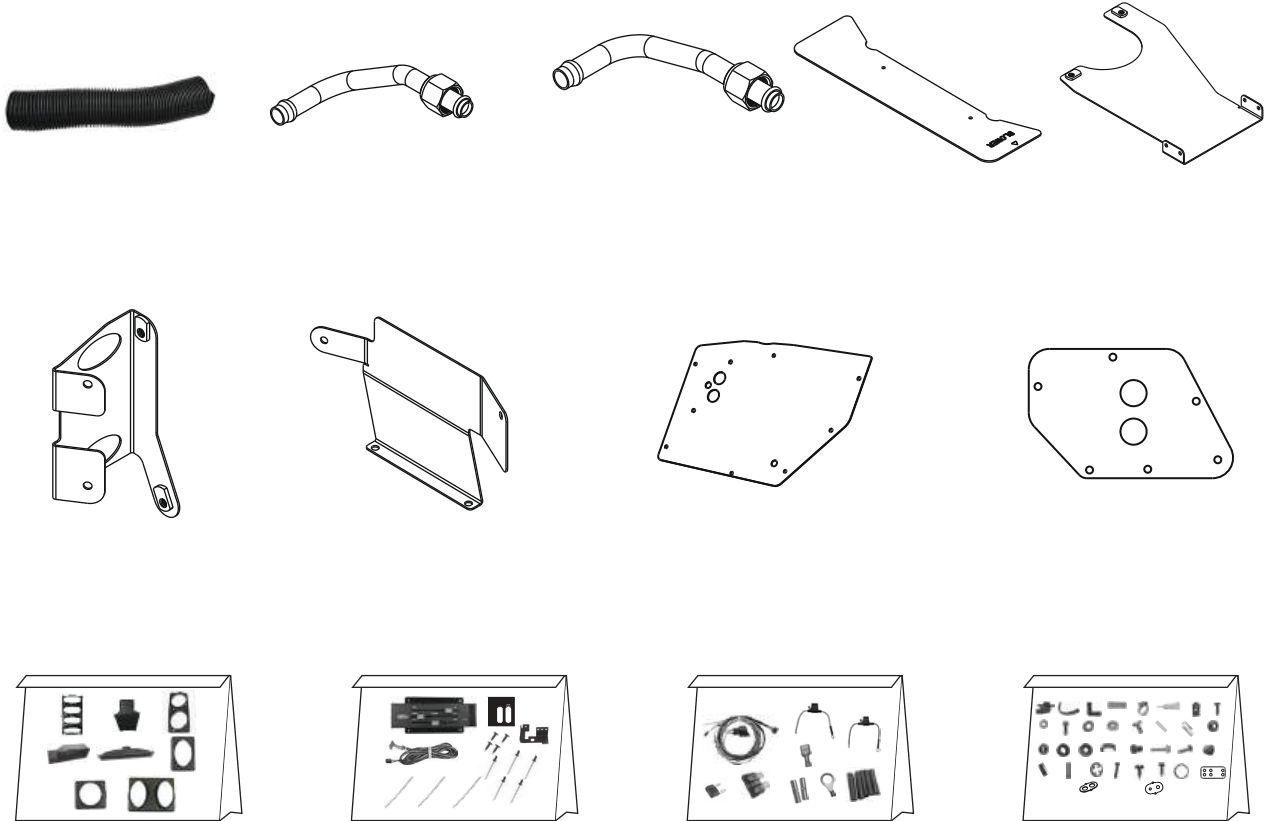

**Accessory Kit
795685**

NOTE: Images may not depict actual parts and quantities. Refer to packing list for actual parts and quantities.



www.vintageair.com

Important Notice—Please Read

For Maximum System Performance, Vintage Air Recommends the Following:

NOTE: Vintage Air systems are designed to operate with R134a refrigerant only. Use of any other refrigerant could damage your A/C system and/or vehicle, and possibly cause a fire, in addition to potentially voiding the warranties of the A/C system and its components.

Refrigerant Capacities:

Vintage Air System: 1.8 lbs. (28.8 oz.) or 816 grams of **R134a**, charged by weight with a quality charging station or scale. **NOTE: Use of the proper type and amount of refrigerant is critical to system operation and performance.**

Other Systems: Consult manufacturer's guidelines.

Lubricant Capacities:

New Vintage Air-Supplied Sanden Compressor: No additional oil needed (Compressor is shipped with proper oil charge).

All Other Compressors: Consult manufacturer (Some compressors are shipped dry and will need oil added).

Safety Switches

Your Vintage Air system is equipped with a binary pressure safety switch. A binary switch disengages the compressor clutch in cases of extreme low pressure conditions (refrigerant loss) or excessively high head pressure (406 PSI) to prevent compressor damage or hose rupture. A trinary switch combines Hi/Lo pressure protection with an electric fan operation signal at 254 PSI, and should be substituted for use with electric fans. Compressor safety switches are extremely important since an A/C system relies on refrigerant to circulate lubricant.

Service Info:

Protect Your Investment: Prior to assembly, it is critical that the compressor, evaporator, A/C hoses and fittings, hardlines, condenser and receiver/drier remain capped. Removing caps prior to assembly will allow moisture, insects and debris into the components, possibly leading to reduced performance and/or premature failure of your A/C system. This is especially important with the receiver/drier.

Additionally, when caps are removed for assembly, **BE CAREFUL!** Some components are shipped under pressure with dry nitrogen.

Evacuate the System for 35-45 Minutes: Ensure that system components (Drier, compressor, evaporator and condenser) are at a temperature of at least 85°F. On a cool day, the components can be heated with a heat gun **or** by running the engine with the heater on before evacuating. Leak check and charge to specifications.

Bolts Passing Through Cowl and/or Firewall:

To ensure a watertight seal between the passenger compartment and the vehicle exterior, for all bolts passing through the cowl and/or firewall, Vintage Air recommends coating the threads with silicone prior to installation.

Heater Hose (not included with this kit):

Heater hose may be purchased from Vintage Air (Part#31800-VUD) or your local parts retailer. Routing and required length will vary based on installer preference.



www.vintageair.com

Important Wiring Notice—Please Read

Some vehicles may have had some or all of their radio interference capacitors removed. There should be a capacitor found at each of the following locations:

- 1. On the positive terminal of the ignition coil.**
- 2. If there is a generator, on the armature terminal of the generator.**
- 3. If there is a generator, on the battery terminal of the voltage regulator.**

Most alternators have a capacitor installed internally to eliminate what is called “whining” as the engine is revved. If whining is heard in the radio, or just to be extra cautious, a radio interference capacitor can be added to the battery terminal of the alternator.

It is also important that the battery lead is in good shape and that the ground leads are not compromised. There should be a heavy ground from the battery to the engine block, and additional grounds to the body and chassis.

If these precautions are not observed, it is possible for voltage spikes to be present on the battery leads. These spikes come from ignition systems and charging systems, and from switching some of the vehicle’s other systems on and off. Modern computer-operated equipment can be sensitive to voltage spikes on the power leads, which can cause unexpected resets, strange behavior and/or permanent damage.

Vintage Air strives to harden our products against these types of electrical noise, but there is a point where a vehicle’s electrical system can be degraded so much that nothing can help.

Radio interference capacitors should be available at most auto and truck parts suppliers. They typically are cylindrical in shape, a little over an inch long and a little over a half-inch in diameter, and they have a single lead coming from one end of the cylinder with a terminal on the end of the wire, as well as a mounting clip which is screwed into a good ground on the vehicle. The specific value of the capacitance is not too significant in comparison to ignition capacitors that are matched with the coil to reduce pitting of the points.

- Care must be taken, when installing the compressor lead, not to short it to ground. The compressor lead must not be connected to a condenser fan or to any other auxiliary device. Shorting to ground or connecting to a condenser fan or any other auxiliary device may damage wiring or the compressor relay, and/or cause a malfunction.
- When installing ground leads on Gen 5 systems, the blower control ground and ECU ground must be connected directly to the negative battery post.
- For proper system operation, the heater control valve must be connected to the ECU.



www.vintageair.com

Engine Compartment Disassembly

NOTE: Before starting the installation, check the function of the vehicle (horn, lights, etc.) for proper operation, and study the instructions, illustrations, photos & diagrams.

Perform the following:

1. Evacuate the A/C system (if necessary).
2. Disconnect the battery.
3. Place a jack stand under the axle bar on the passenger side of the vehicle (See Photo 1, below), then remove the passenger side front tire.
4. Drain the radiator.
5. Remove the vacuum line from the OEM heater control valve (See Photo 2, below).
6. Remove the (2) heater hoses from the heater core, then at the intake and water pump (discard) (See Photo 2, below).
7. Disconnect the A/C hoses from the evaporator blower assembly and compressor (See Photo 2, below).

Place jack stand
under axle bar

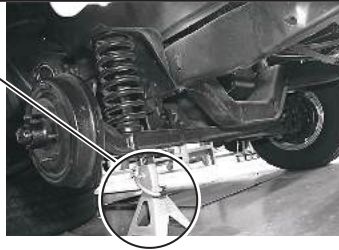


Photo 1

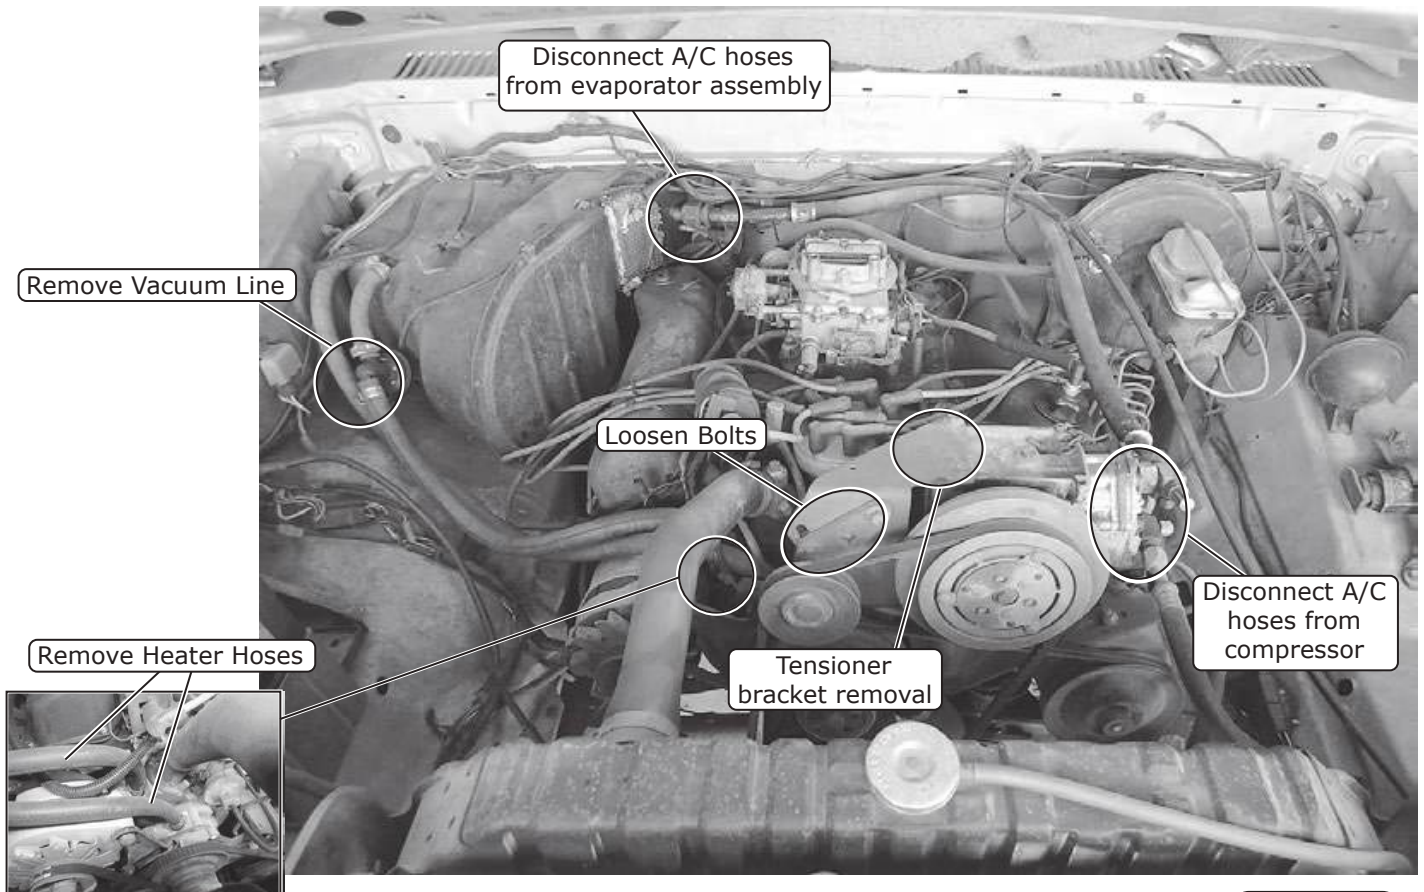


Photo 2

Engine Compartment Disassembly (Cont.)

8. Disconnect the cable from the evaporator blower assembly (See Photo 3, below).
9. Temporarily remove the vacuum elbow from the passenger side valve cover (See Photo 4, below). **NOTE: Removing the vacuum elbow temporarily prevents it from being damaged, and makes it easier to remove the blower housing.**
10. Remove the OEM fan shroud by removing (4) bolts, ((2) on each side) (See Photo 5, below).
11. Remove the radiator cooling fan by removing (4) bolts from the fan (See Photo 6, below).
12. Disconnect the A/C hoses from the A/C compressor (See Photo 2, Page 6).
13. Loosen the (2) bolts on the A/C compressor drive belt tensioner, and remove the belt (See Photo 2, Page 6).
14. Loosen the alternator adjustment bolts and remove the belt (See Photo 7, below).
15. Loosen the power steering adjustments and remove the belt (See Photo 8, below).
16. Remove the water pump pulley (See Photo 9, below).
17. Remove the A/C belt tensioner bracket by removing (5) bolts (See Photo 2, Page 6).
18. Remove (4) compressor bracket bolts located under the compressor.
19. Remove the (3) compressor base mounting bolts.

Disconnect cable from evaporator blower assembly

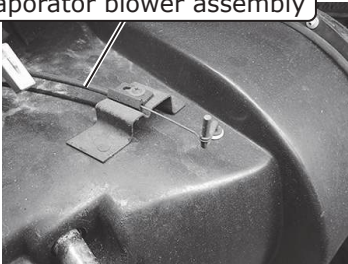


Photo 3

Temporarily remove vacuum elbow from passenger side valve cover

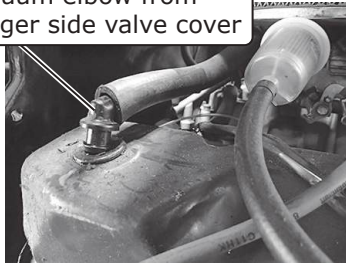


Photo 4

Remove OEM fan shroud by removing (4) bolts

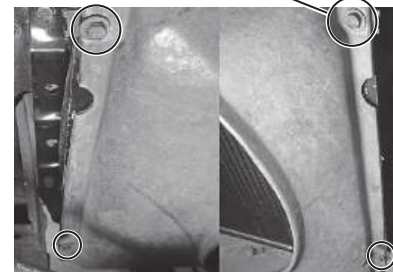


Photo 5

Remove radiator cooling fan by removing (4) bolts from fan



Photo 6

Loosen alternator adjustment bolts and remove belt

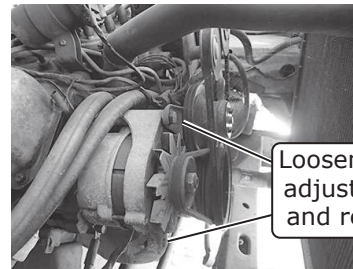


Photo 7

Loosen power steering adjustments and remove belt

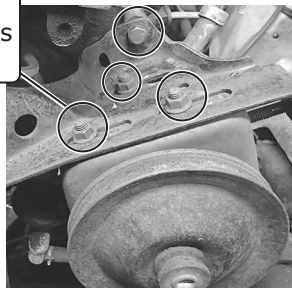


Photo 8

Remove water pump pulley



Photo 9



www.vintageair.com

Passenger Compartment Disassembly

Perform the Following:

1. Remove (4) glove box door screws and (1) glove box door cable screw (See Photo 1, below), then remove the glove box door (retain door and hardware).
2. Remove (4) glove box mounting screws and remove the glove box from the dash (discard) (See Photo 2, below).
3. Remove (4) nuts and (2) screws from the OEM evaporator blower housing (See Photos 3 and 4, below), then remove the blower door cover (See Photo 5, below) (discard).
4. Remove (3) screws from the fresh air duct assembly on the passenger side kick panel and remove the fresh air boot (See Photo 6, below) (discard).
5. Remove the passenger side A/C duct (See Photo 7, below) **NOTE: S-clips hold duct to louver.**
6. Remove (2) duct adapter screws and separate the adapter from the housing, then remove vacuum and duct hoses. Remove the duct adapter (See Photo 8, below) (discard).
7. Remove (2) bolts from the firewall (See Photo 9, below).

Remove (4) glove box door screws and (1) glove box door cable screw

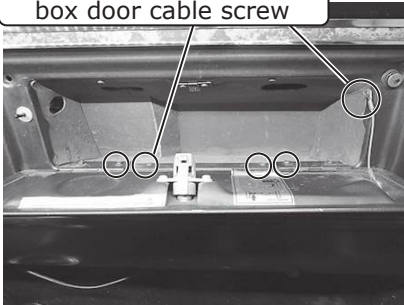


Photo 1

Remove (4) mounting screws and remove glove box from dash


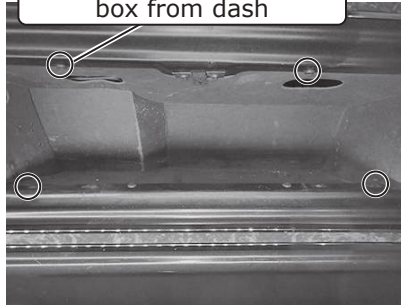


Photo 2

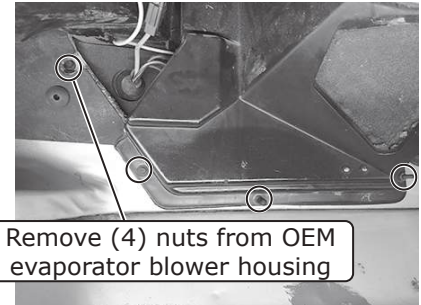

Remove (4) nuts from OEM evaporator blower housing

Photo 3

Remove (2) screws from OEM evaporator blower housing

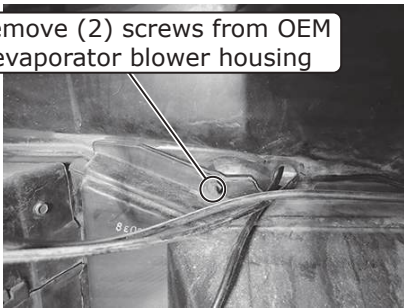


Photo 4

Remove blower door cover

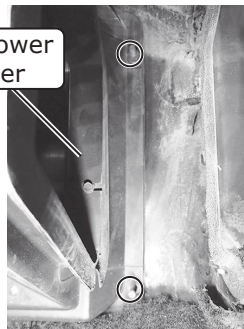


Photo 5

Remove (3) screws from fresh air duct assembly and remove fresh air boot



Photo 6

Remove passenger side A/C duct

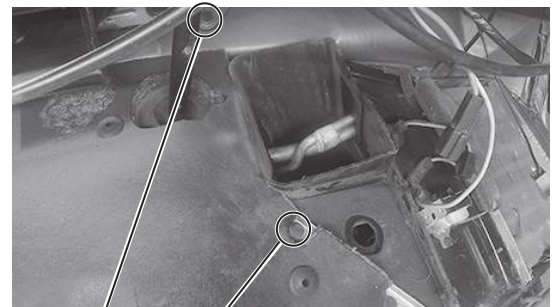


Photo 7

Remove (2) duct adapter screws



Photo 8




Remove (2) bolts from firewall

Photo 9


Passenger Compartment Disassembly (Cont.)

8. Unplug the wiring connections, then push the grommet and wiring through the firewall into the engine compartment (See Photo 10, below).
9. Push the heater core housing into the engine compartment, and remove it from the vehicle.
10. Remove radio knobs and mounting hardware, then the headlight and wiper knobs (See Photos 11 and 12, below).
11. Remove (5-7) gauge cluster bezel screws (depending on model) (retain) (See Photo 13, below).
12. Disconnect the light for the headlight and wiper knobs (See Photo 14, below).
13. Disconnect the driver side A/C duct hose, and remove the bezel from the vehicle.
14. Remove the (4) gauge cluster mounting screws (See Photo 15, below) (retain), then unplug the wiring and speedometer connections from the back of the cluster. Remove from the vehicle.
15. Remove the (4) control panel mounting screws (discard), disconnect all plugs, cables and remove the control panel from the vehicle (See Photo 16, below).
16. Remove the (4) control panel/radio mounting bracket screws. Unplug the radio connections and remove the radio from the vehicle (See Photo 17, below). **NOTE: This is to gain access for the installation.**
17. Disconnect the center louver duct hose from the duct system and center louver.
18. Remove screw from the bottom center duct bracket (See Photo 18, below).

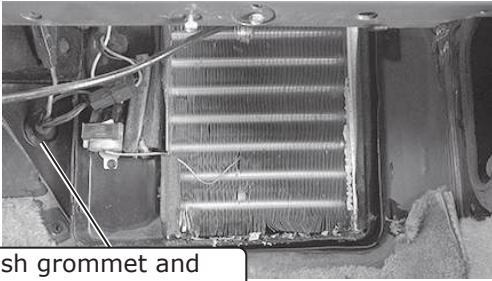

Push grommet and wiring through firewall into engine compartment

Photo 10

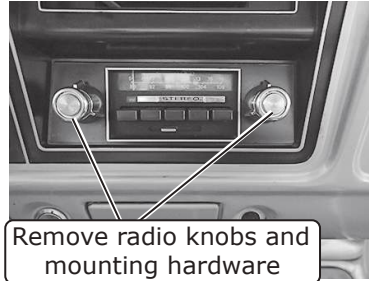

Remove radio knobs and mounting hardware

Photo 11




Remove headlight and wiper knobs

Photo 12




Remove (5-7) gauge bezel screws

Photo 13

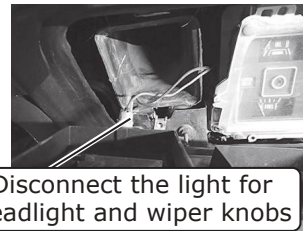

Disconnect the light for headlight and wiper knobs

Photo 14

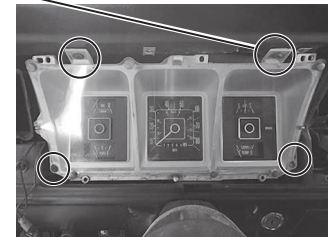

Remove (4) gauge cluster screws (retain)

Photo 15

Remove (4) control panel mounting screws (discard), then disconnect all plugs and cables



Photo 16

Remove (4) control panel/radio mounting bracket screws then unplug radio connections



Photo 17

Remove screw from bottom center duct bracket




Photo 18



www.vintageair.com

Passenger Compartment Disassembly (Final)

19. Unplug the vacuum lines and electrical plugs from the duct/door housing, then remove from the underdash (See Photo 19, below).
20. Remove the (2) driver side air duct screws and remove the duct from the vehicle (See Photo 20, below).
21. Remove the (2) screws from the driver/passenger defrost vents to remove the defrost plenum (See Photos 21 and 22, below). **NOTE: Vacuum lines and wiring are no longer needed.**

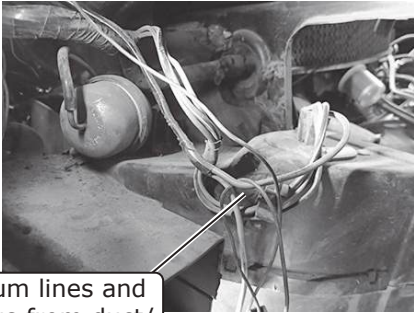


Unplug vacuum lines and electrical plugs from duct/door housing

Photo 19



Remove (2) driver side air duct screws

Photo 20

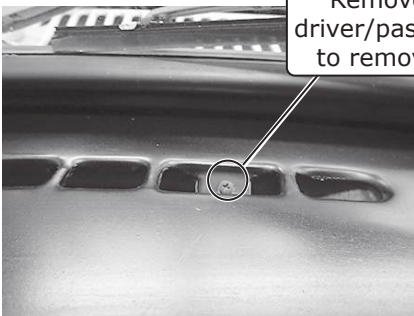

Remove (2) screws from driver/passenger defrost vents to remove defrost plenums

Photo 21

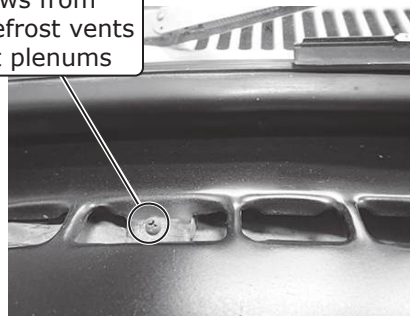


Photo 22

Condenser Assembly and Installation

1. Refer to separate instructions included with the condenser kit to install the condenser.
2. Binary switch installation (Refer to condenser instructions).

Compressor and Brackets

1. Refer to separate instructions included with the bracket kit to install the compressor bracket.



www.vintageair.com

Passenger Side Wheel Well Modification

1. Locate the passenger side inner fender kick panel grommet. Follow step "a" if there is a grommet and/or opening. Follow step "b" if the truck does not have a grommet and/or opening.
 - a. Remove the passenger side inner fender kick panel grommet (See Photo 1, below). Locate the firewall A/C hose cover plate and center it onto the passenger side inner fender kick panel opening. Using the cover plate as a template, mark and drill (2) 5/32" mounting holes (See Photo 2, below).
 - b. Locate the firewall A/C hose cover plate. Measure down from the body seam 4" (See Photos 3 and 4, below) and from the side body seam 1/2" (See Photo 5, below). Secure the cover plate in place as shown in Photo 6, below. Mark the (4) holes. The (2) mounting holes will be drilled using a 5/32" drillbit and the (2) A/C hose openings will be drilled to 1 1/8" (See Photo 7, below).

Remove passenger side inner fender kick panel grommet



Photo 1

Measure down 4" from body seam

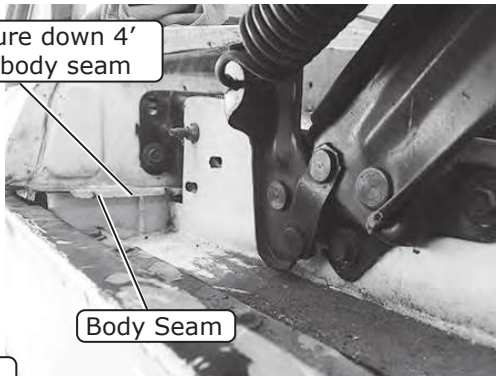


Photo 3

Measure down from body seam 4"

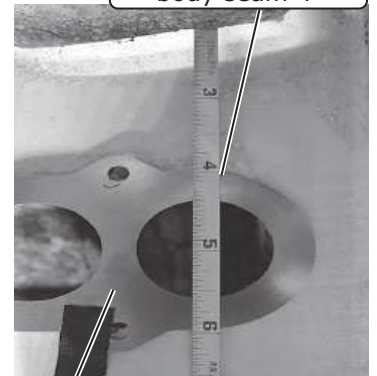


Photo 4

Firewall A/C Hose Cover Plate 646990



Mark and drill (2) 5/32" mounting hole

Photo 2

Body Seam

Firewall A/C Hose Cover Plate 646990

Measure 1/2" from side body seam

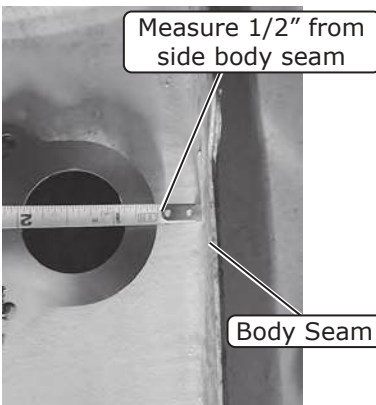



Photo 5

Secure A/C hose cover plate in place



Photo 6

Drill (2) 5/32" Mounting holes

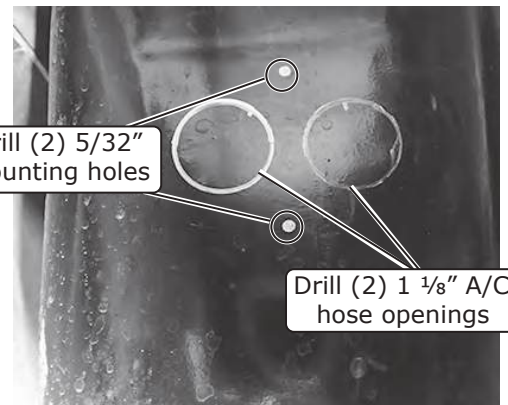

Drill (2) 1 1/8" A/C hose openings


Photo 7



www.vintageair.com

Engine Compartment, Passenger Side Inner Fender Modification

1. On the passenger side inner fender, under the battery tray, locate a 3/4" OEM hole (See Photo 1, below). Enlarge the hole to 7/8" to accommodate the #10 A/C hose bulkhead fitting (See Photo 2, below).
2. Directly under the recently enlarged hole, measure from the middle of the hole 1 1/2" down, then mark and drill a 1" hole to accommodate the #6 A/C hose grommet (See Photos 2 and 3, below).

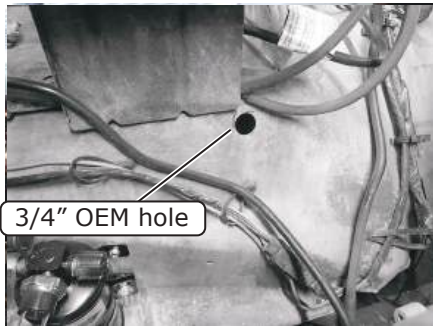

Engine Side

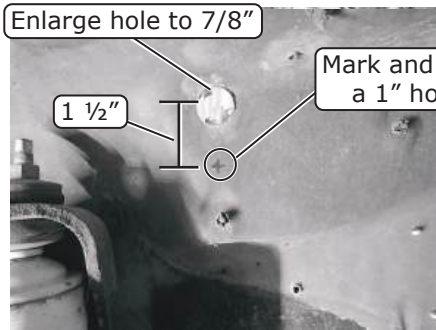


Photo 1

Wheel Well Side

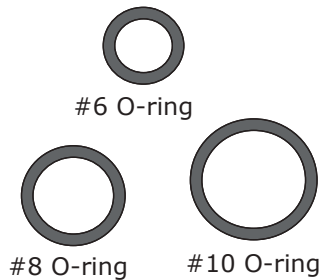


Photo 2


Wheel Well Side

Photo 3



Lubricating O-rings



NOTE: Standard torque specifications:
#6: 11 to 13 ft-lb.
#8: 15 to 20 ft-lb.
#10: 21 to 27 ft-lb.

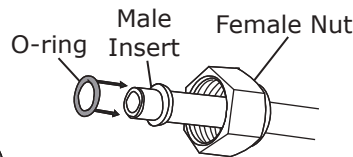

For a proper seal of fittings: Install supplied O-rings as shown and lubricate with refrigerant oil.

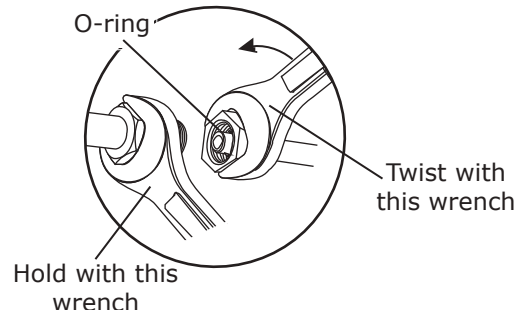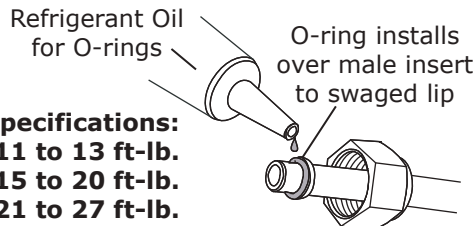

Properly Seated O-ring Land

When installing a hardline or A/C hose fitting onto the evaporator module, ensure the O-ring land is seated properly (See Photo 1, below). An improperly seated O-ring land (See Photo 2, below) can cause a leak. To properly install the fitting, slide the hardline or A/C hose nut back to expose the O-ring land and seat it onto the evaporator module fitting. Then, slide the hardline or A/C hose nut forward and thread it onto the evaporator module fitting, ensuring the O-ring land does not move or lift.

Properly Seated O-ring Land



Photo 1

Improperly Seated O-ring Land



Photo 2

NOTE: Photos shown are for reference only. Fittings may vary depending on kit received.



www.vintageair.com

Evaporator Preparation

On a workbench, perform the following:

1. Install a plastic cap as shown in Photo 1, below.
2. Install the floor plenum using (2) spring clips (See Figure 1 and Photo 2, below).
3. Install the dash plenum using (4) spring clips (See Figure 2 and Photo 3, below).
NOTE: Do not install the third plenum for the defrost yet, this will be installed once the unit is mounted behind the dash, there is limited space, and this plenum may interfere.
4. Install the (2) hardlines as shown in Figure 3, below, with (2) properly lubricated #10 O-rings (See Lubricating O-rings, Page 12), do not fully tighten, they will get adjusted in the next steps.
5. Install (2) well nuts next to the floor plenum (See Figure 3, below).
6. Install the driver-side evaporator bracket using (2) 1/4-20 x 1" serrated flange bolts (See Figure 4, below).

Install a plastic cap


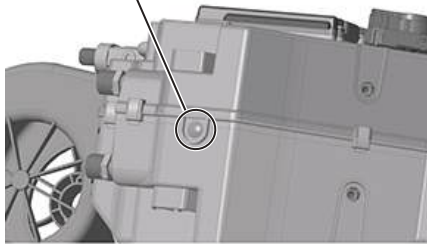


Photo 1

Floor Plenum
625338

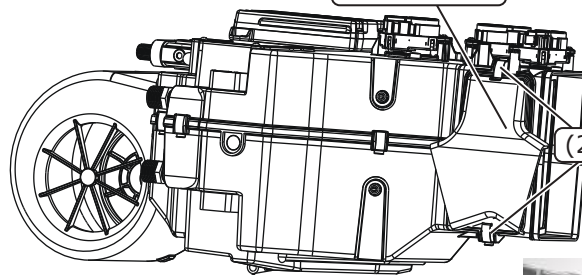

(2) Spring Clips

Using (2) spring clips, install floor plenum


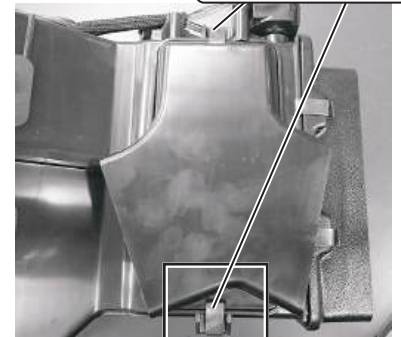


Photo 2

Dash Plenum
625330

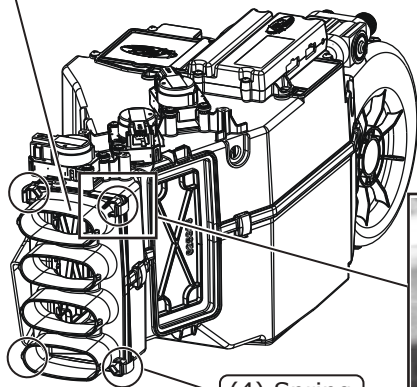

(4) Spring Clips


Figure 2



Spring Clip Installed

Photo 3

Upper Heater Hardline
082083

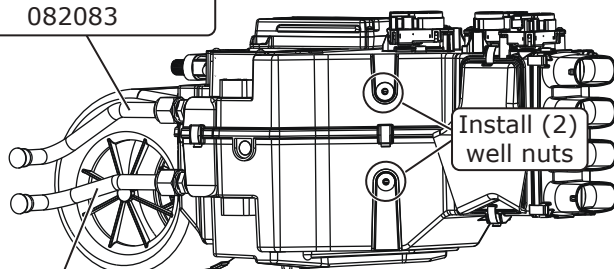


Install (2) well nuts

Lower Heater Hardline
082084

Figure 3

(2) 1/4-20 x 1" Serrated Flange Bolts

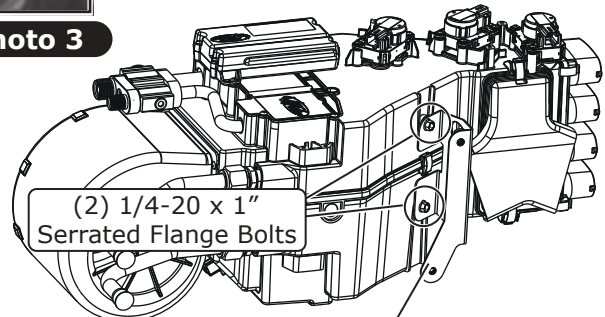

Install evaporator firewall driver-side bracket
646995





Figure 4



www.vintageair.com

Evaporator Preparation (Cont.)

7. Install the passenger-side bracket using (4) #10 x 5/8" screws (See Figure 5, below).
8. Install (2) 1/4-20 x 1 1/2" full-threaded studs on the top mounting holes on both evaporator brackets (See Figure 6, below). Thread the studs halfway in, if the studs are sticking out too far it may cause interference issues when mounting the unit under the dash because of the tight clearance.
9. Temporarily place the firewall cover on top of the evaporator brackets, using the studs to align it, then center the hardlines into the firewall cover holes (See Figure 7, below). Once the hardlines are centered, remove the firewall cover, and tighten the hardlines. **NOTE: For additional clearance, when tightening hardlines, the evaporator bracket can be temporarily removed.**
10. Locate the evaporator dash bracket and install (2) #8 U-nuts as shown in Photo 4, below. **NOTE: Do not install the dash bracket at this time.**

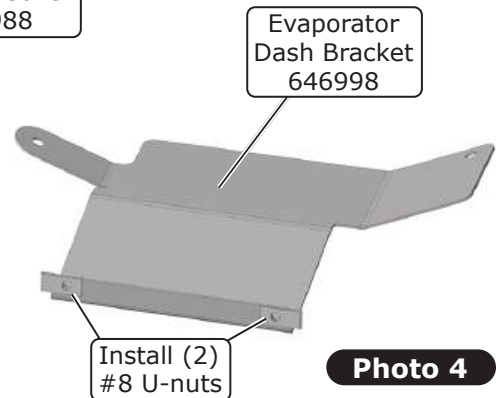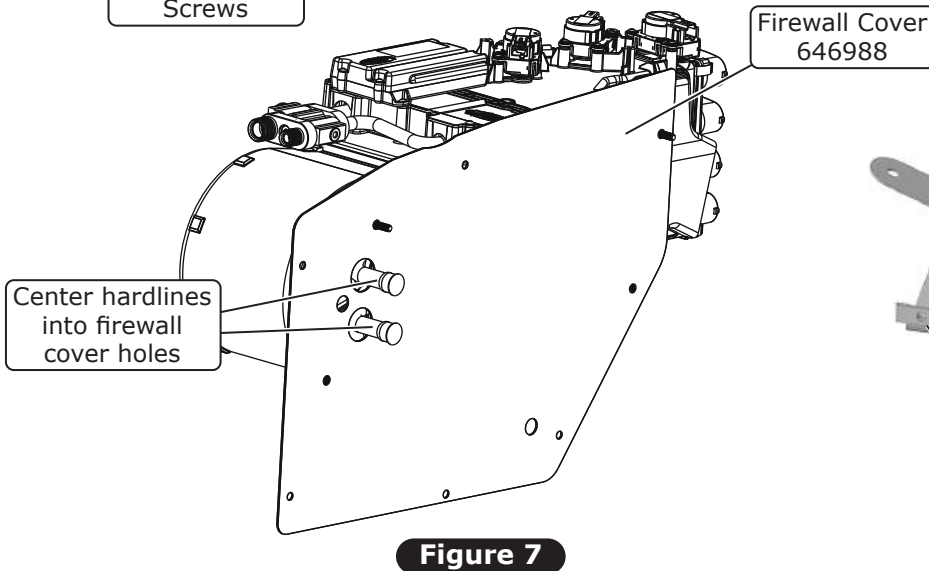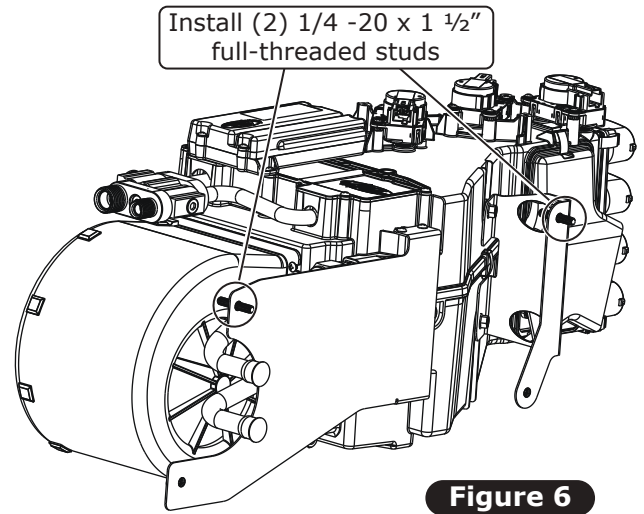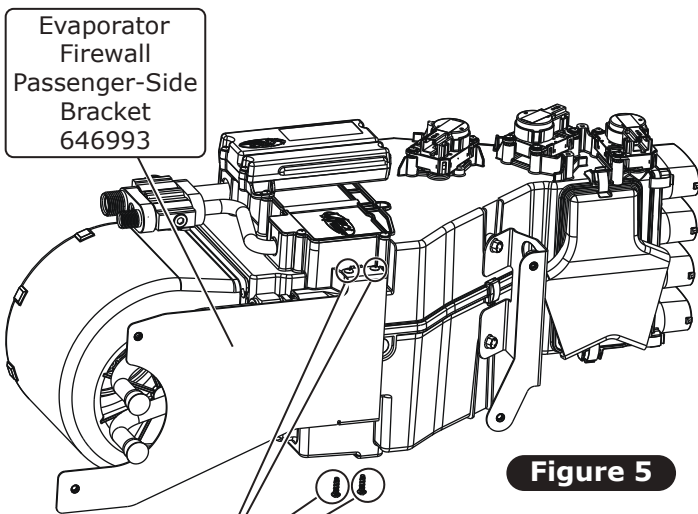



www.vintageair.com

Firewall Cover Installation

1. Install (5) 1/4-20 x 3/4" bolts and (5) 3/16" push-on rings onto the firewall cover as shown in Photos 1 and 2, below.

NOTE: Before the final installation of the firewall cover, Vintage Air recommends mocking up the evaporator module on the firewall with the firewall cover to confirm the evaporator is leveled as shown on Step 10, Page 21. The OEM firewall mounting holes are inconsistent and some holes may need to be enlarged to align with the firewall cover.

2. Apply a bead of silicone to the mating surface of the firewall cover (See Figure 1, below).
3. Install the firewall cover from the engine compartment (See Photo 3, below), and secure it from inside the passenger compartment using (5) 1/4" USS flat washers and (5) 1/4-20 nuts with star washers (See Photo 4, below). **NOTE:** Ensure the mounting holes are aligned before tightening the mounting hardware.


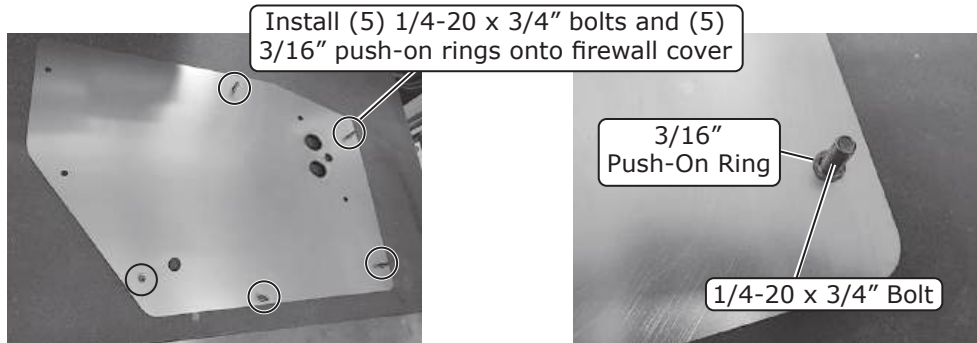


Photo 1

Photo 2

Apply bead of silicone to mating surface of firewall cover

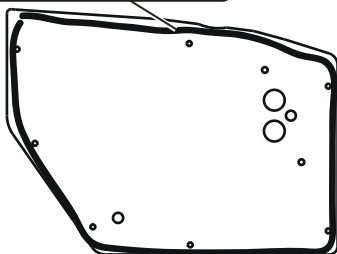

See Note after Step 1, before applying silicone.

Figure 1

Install firewall cover from engine compartment



Photo 3

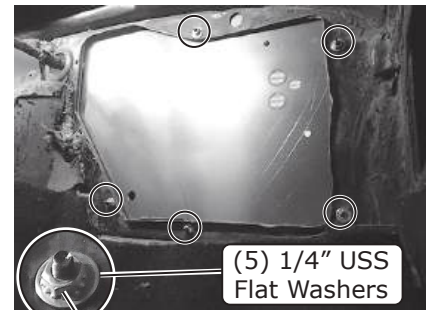


Photo 4

(5) 1/4-20 Nuts with Star Washers

Firewall Insulation

NOTE: For proper operation of the evaporator module, Vintage Air recommends using heat-blocking insulation in the area around the subcase (firewall, inner cowl and kick panel). Due to tight clearance for the evaporator module between the firewall and dash, Vintage Air recommends an insulation thickness of no more than 1/4".

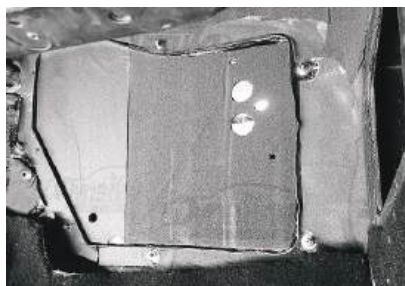


Photo 1


Insulation Installed



www.vintageair.com


Defrost Duct Installation

1. On the driver side defrost duct, install a #8 U-nut onto the left side of the defrost bracket as shown in Photo 1, below.
2. On the passenger side defrost duct, install a #8 U-nut onto the right side of the defrost bracket as shown in Photo 2, below.
3. Attach a piece of duct hose on each defrost duct, lengths shown on Duct Hose Routing, Page 26. Once the evaporator module is installed there will be limited space to connect the duct hoses.
4. Install the driver- and passenger-side defrost ducts, and secure them using (2) ((1) per side) #8 x 1" screws in the OEM defrost mounting holes (See Photo 3, below).

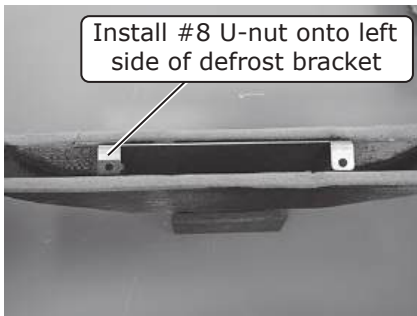

Driver Side Defrost Duct

Photo 1

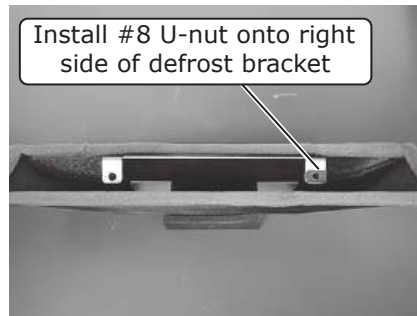

Passenger Side Defrost Duct

Photo 2


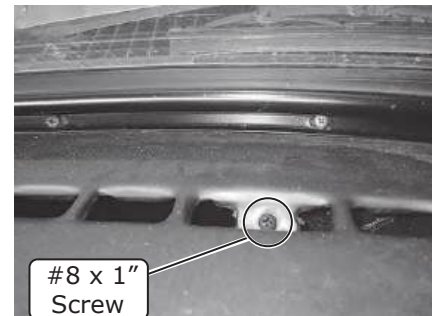


Photo 3


Louver Hose Adapter Installation

1. Install the S-clips onto the driver/passenger and center louver hose adapters as shown in Photos 1, 2 and 3, below.
2. Install the hose adapters onto the OEM dash louvers as shown in Photos 4-6, below and Photos 7-9, Page 17.

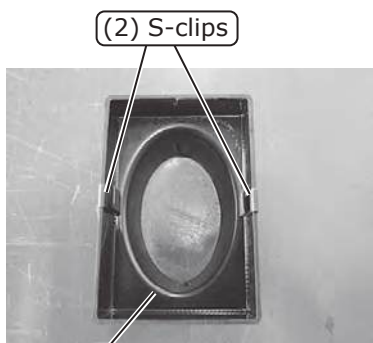


Passenger Side Louver Hose Adapter 592970

Photo 1

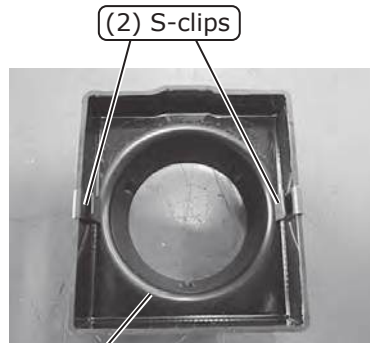

Driver Side Louver Hose Adapter 592971

Photo 2

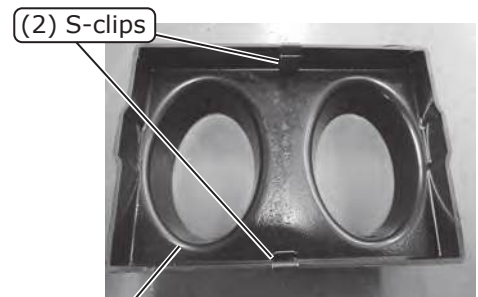

Dual Center OEM Louver Hose Adapter 592972

Photo 3



Passenger Side

Photo 4



Passenger Side

Photo 5



Center Louver

Photo 6



www.vintageair.com

Louver Hose Adapter Installation (Cont.)

3. Install the hose adapters onto the OEM dash louvers as shown in Photos 7-9, below.



Center Louver

Photo 7



Driver Side

Photo 8



Driver Side


Photo 9

A/C Hose Routing & Kick Panel Cover Installation

NOTE: Soapy water may be used to ease insertion of the A/C hoses through the grommets, but be sure the hoses are capped to prevent water from getting inside.

1. Locate the #10 evaporator/fenderwell A/C hose, and install the end of the hose with the 90° fitting through the inner fenderwell (See Photo 1, below). **NOTE: The 90° bulkhead fitting will restrict the A/C hose from going through the inner fenderwell.**
2. Locate the 1 1/4" grommet and install it into the inner fenderwell under the #10 bulkhead fitting (See Photo 2, below).
3. Locate the #6 drier/evaporator A/C hose and route the straight fitting from under the fenderwell through the grommet into the engine compartment (See Photo 3, below). **NOTE: Ensure that the straight fitting reaches the drier connection.**

#10 Evaporator/
Fenderwell A/C Hose
082085

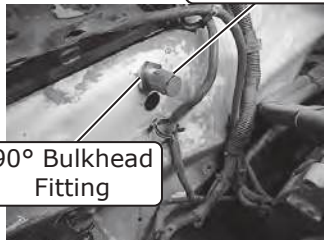


90° Bulkhead
Fitting

Photo 1



1 1/4" Grommet

Photo 2

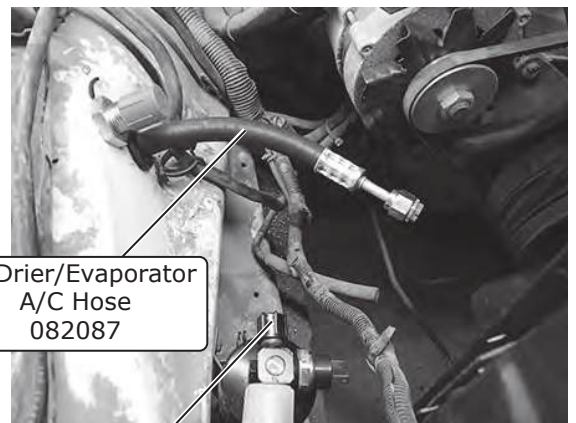

#6 Drier/Evaporator
A/C Hose
082087

Drier Connection

Photo 3



www.vintageair.com

A/C Hose Routing & Kick Panel Cover Installation (Cont.)

4. Secure the #10 and #6 A/C hoses to the core support using the #10 and #6 Adel clamps with #10 x 1/2" sheet metal screws (See Photo 4, below).
5. Route the (2) A/C hoses into the channel on the inner fender, and install an A/C hose fenderwell bracket onto the OEM bolt using a 5/16-18 hex nut (See Photo 5, below).
6. Locate the firewall A/C hose cover plate and rubber boot (See Photo 6, below).
7. Route the #10 A/C hose 45° fitting through the firewall A/C hoses cover plate, and through the large hole in the rubber boot (See Photo 7, below).
8. Route the #6 A/C hose 45° fitting through the firewall cover plate and rubber boot (See Photo 8, below).
9. Route the #6 and #10 A/C hoses through the kick panel opening into the passenger compartment.
10. Install an A/C hose fenderwell bracket using a 1/4-20 x 1/2" hex bolt and 1/4-20 nut with star washer through the OEM hole on the inner fender (See Photo 9, below).
11. Secure the rubber boot and firewall cover plate to the firewall using (2) #10 x 1/2" sheet metal screws into the previously drilled 5/32" holes in the inner fender kick panel grommet location (See Photo 9, below).
12. Locate the kick panel cap and install (2) large grommets (See Photo 10, below). **NOTE: Verify the correct side of the grommet is installed.**

Photo 4: Shows the #10 A/C Hose and #6 A/C Hose secured to the core support using #10 Adel Clamps and #10 x 1/2" Sheet Metal Screws. A #6 Adel Clamp is also visible.

Photo 5: Shows the A/C Hose Fenderwell Bracket (646967) installed on the inner fender using a 5/16-18 Hex Nut.

Photo 6: Shows the Inner Fender Rubber Boot (338637) and the Inner Fender Cover Plate (646990).

Photo 7: Shows the #10 A/C hose 45° fitting being routed through the firewall cover plate and a large hole in the rubber boot.

Photo 8: Shows the #6 A/C hose 45° fitting being routed through the firewall cover plate and rubber boot.

Photo 9: Shows the A/C Hose Fenderwell Bracket (646967) secured to the inner fender using a 1/4-20 Hex Nut with Star Washer and a 1/4-20 x 1/2" Hex Bolt. Two #10 x 1/2" Sheet Metal Screws are used to secure the rubber boot and cover plate.

Photo 10: Shows the Kick Panel Cover (647109) with two Large Grommets (33137-VUI) and one 1 1/4" O.D. Grommet (33133-VUI) being installed.



www.vintageair.com

A/C Hose Routing & Kick Panel Cover Installation (Final)

- 13. Route the #10 evaporator/fenderwell A/C hose 45° fitting through the right side grommet in the kick panel cover (See Photo 11, below).
- 14. Route the #6 drier/evaporator A/C hose 45° fitting through the left side kick panel grommet (See Photo 12, below). **NOTE: Be sure that the 45° fitting is facing up as shown in Photo 12, below.**
- 15. Apply silicone around the kick panel cover mating surface for a watertight seal (See Photo 13, below).
- 16. Install the kick panel cover onto the kick panel opening, and secure it using (5) #14 x 3/4" washer head screws (See Photo 14, below). **NOTE: The last screw will be installed later with the relay.**
- 17. Secure the A/C hoses to the fenderwell brackets using the supplied tie wraps (See Photos 15 and 16, below).



Photo 11

#10 Bulkhead/Evaporator A/C Hose 45° Fitting

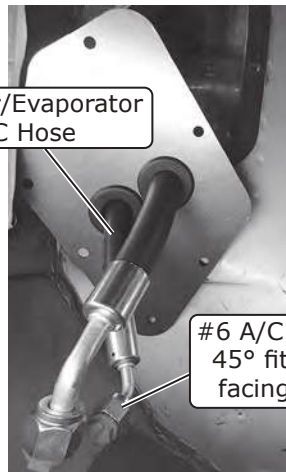


Photo 12

#6 Drier/Evaporator A/C Hose

#6 A/C hose 45° fitting facing up



Photo 13

Apply silicone around kick panel mating surface for watertight seal



Photo 14

Last screw will be installed later with relay

(5) #14 x 3/4" Washer Head Screws



Photo 15

Secure A/C hoses to fenderwell bracket using supplied tie wraps



Photo 16



www.vintageair.com

Evaporator Installation

NOTE: A board cut approximately to 12 1/4" must be used between the firewall and the dash to provide space to install the evaporator module (See Photo 1, below).

1. Remove the (2) dash mounting bolts ((1) in the center of lower dash (See Photo 2, below), and (1) on the passenger side in the upper right corner next to the kick panel opening (See Photo 3, below)). **NOTE: This will be necessary to provide extra space when installing the evaporator module.**
2. Place the evaporator module on the passenger floorboard, and with a properly lubricated #6 O-ring (See Lubricating O-rings, Page 12), install the 45° fitting to the block valve adapter of the evaporator module oriented as shown in Photo 4, below.
3. The ECU must be removed from the evaporator module. Loosen the (2) screws securing the ECU (See Photo 5, below), slide the ECU to the side and remove it (See Photos 6 and 7, below). Very carefully remove the tie wraps securing the ECU harness. The ECU will be relocated under the dash once the evaporator is installed. Secure the (2) screws that were loosened on top of the evaporator module. **NOTE: Do not disconnect the ECU wires, leave the ECU hanging.**
4. Raise the evaporator module under the dash straight up, inserting the studs and hardlines through the firewall (See Photos 8 and 9, below). **NOTE: Look at the heater hardlines through the glove box opening to make sure they clear any protrusion on the firewall. Removal of the OEM insulation is necessary, See the Firewall Insulation information on Page 15.**

12 1/4" Board



Photo 1

Remove (2) dash mounting bolts

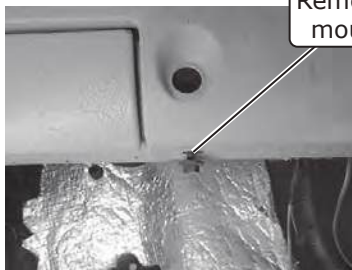


Photo 2



Photo 3

Place evaporator module on passenger floorboard

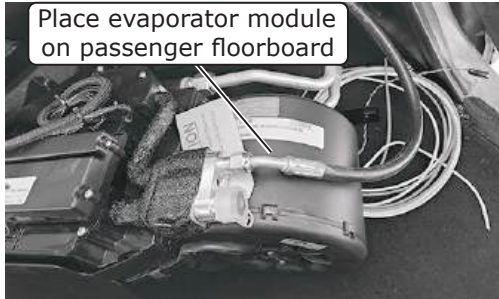


Photo 4

Loosen (2) screws securing ECU

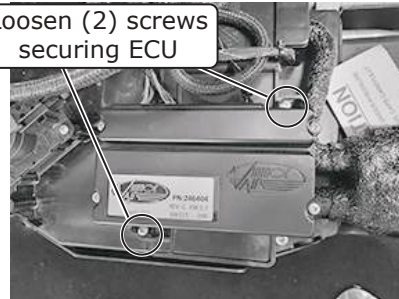


Photo 5

Slide ECU to side and remove it



Photo 6



ECU Removed

Photo 7

Raise evaporator module under dash straight up



Photo 8

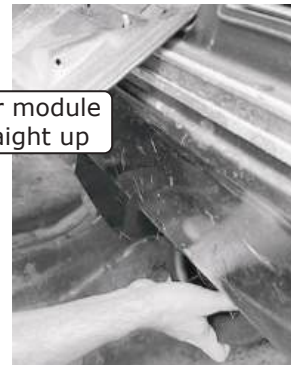


Photo 9



www.vintageair.com

Evaporator Installation (Cont.)

5. Install (2) well nuts on the evaporator module as shown in Figure 1, below.
6. Remove the support board and install the evaporator dash bracket onto the evaporator module as shown in Figure 2, below, using (2) 1/4-20 x 1" serrated flange bolts.
7. Install the defrost plenum using (2) spring clips (See Photos 10 and 11, below).
8. From the engine compartment, replace the (2) full-length studs with (2) 1/4-20 x 3/4" serrated flange black bolts and install (2) more of the same bolts to secure the bottom of the (2) evaporator brackets (See Photo 12, below). **NOTE: Do not fully tighten hardware yet.**
9. Reinstall the previously removed (2) OEM dash mounting bolts from Photos 2 and 3, Page 20.
10. Level the evaporator module as shown in Photo 13, below. **NOTE: To ensure proper drainage, it is very important that the evaporator is level, both left-right and fore-aft. Before leveling the evaporator, ensure the vehicle is level. Depending on the vehicle, there may be clearance issues where a standard size level doesn't fit. The use of a compact level may be needed.**

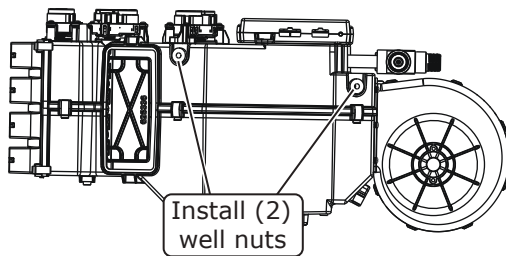


Figure 1

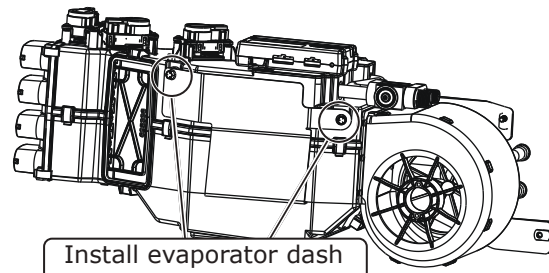


Figure 2



Photo 10

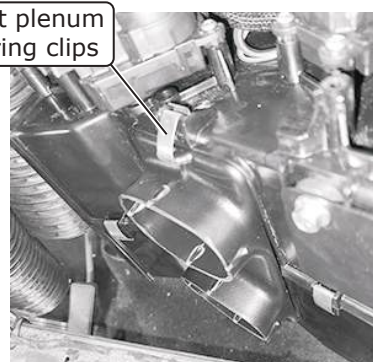


Photo 11

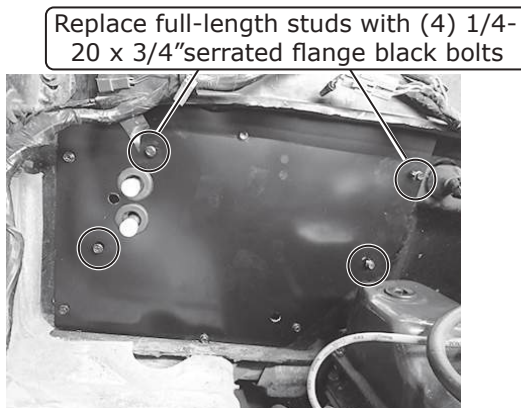


Photo 12

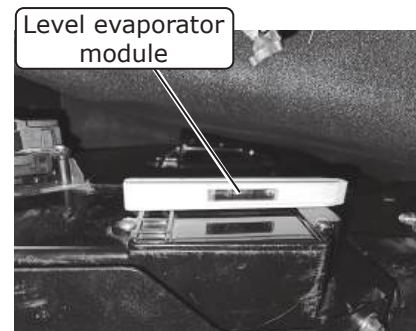


Photo 13



www.vintageair.com

Evaporator Installation (Final)

11. Use the template provided against the evaporator unit to mark the bottom of the dash (See Photo 14, below). The template must be oriented properly with the "blower" on the top and the arrow pointing to the evaporator blower as shown in Photo 15, below.
12. Drill (2) 11/64" holes (See Photo 16, below).
13. Install (2) #8 x 1/2" screws through the lower dash into the evaporator dash bracket (See Photo 17, below).
14. Install (2) grommets over the heater hardlines (See Photo 18, below).
15. At this time, tighten all hardware that serves the evaporator module.

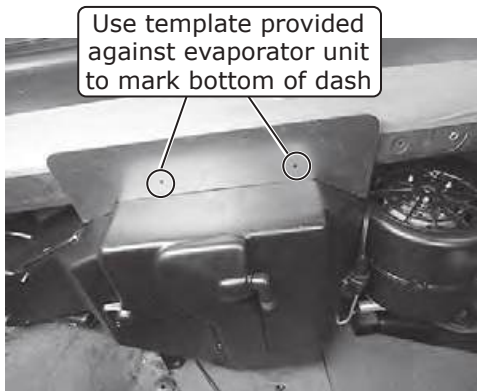


Photo 14

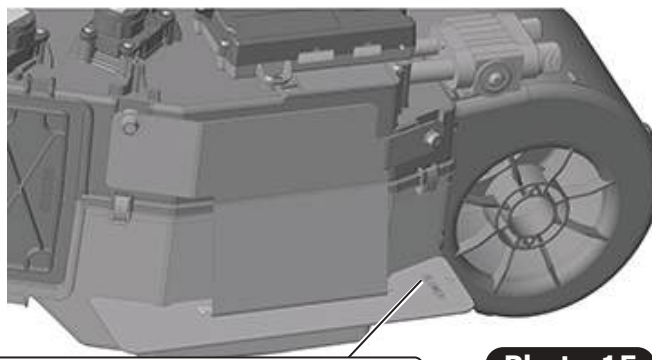


Photo 15

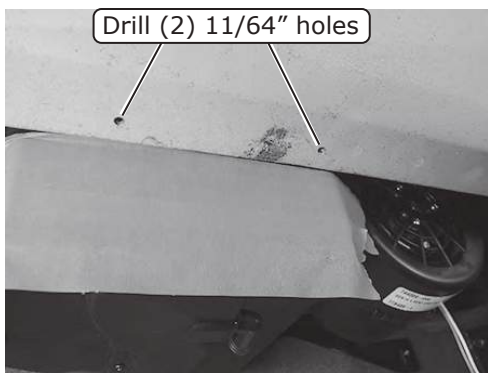


Photo 16

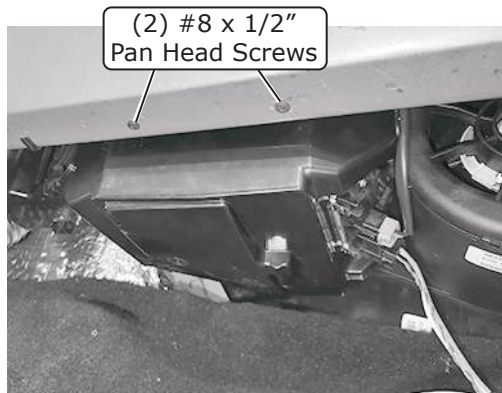


Photo 17

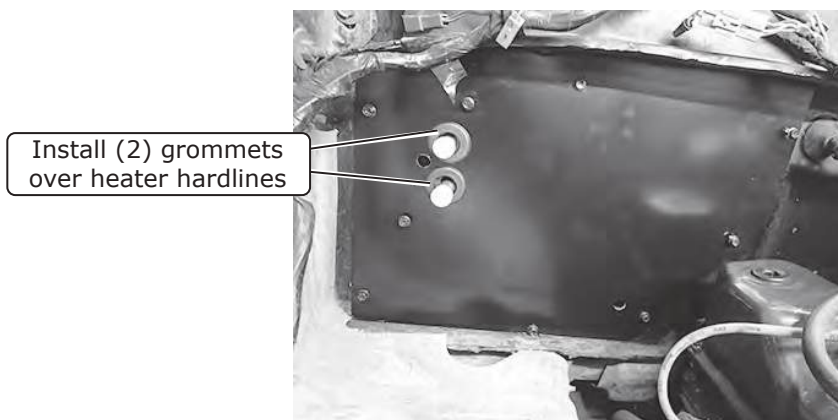


Photo 18



www.vintageair.com

A/C Hose Installation

1. Install the 45° fitting of the #10 evaporator/fenderwell A/C hose to the block valve adapter with a properly lubricated #10 O-ring (See Lubricating O-rings, Page 12, and Photo 1, below).
2. Insulate the #10 evaporator fitting and all exposed metal with the supplied press tape (See Photo 2, below).
3. Using a properly lubricated #6 O-ring (See Lubricating O-rings, Page 12), connect the straight fitting of the #6 drier/evaporator A/C hose to the drier (See Photo 3, below).
4. Using a properly lubricated #10 O-ring (See Lubricating O-rings, Page 12), connect the 135° fitting with service port of the #10 fenderwell/compressor A/C hose to the #10 suction port on the compressor (See Photo 4, below).
5. Using a properly lubricated #10 O-ring (See Lubricating O-rings, Page 12), connect the 45° fitting of the #10 fenderwell/compressor A/C hose to the #10 bulkhead fitting (See Photo 5, below).
6. Using a properly lubricated #8 O-ring (See Lubricating O-rings, Page 12), connect the #8 condenser/compressor A/C hose 90° fitting with service port to the #8 discharge port on the compressor (See Photo 6, below).
7. Using a properly lubricated #8 O-ring (See Lubricating O-rings, Page 12), connect the #8 A/C hose straight fitting to the #8 condenser hardline (See Photo 7, below).

Install 45° fitting of #10 A/C hose to block valve adapter



Photo 1

Insulate all exposed metal with supplied press tape

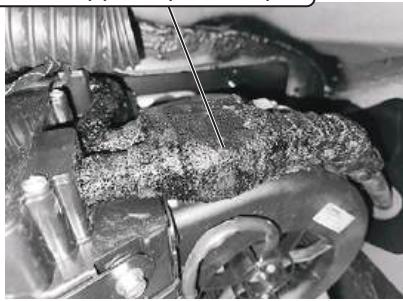


Photo 2

Connect straight fitting of #6 A/C hose to drier



Photo 3

Connect 135° fitting with service port of #10 A/C hose to compressor



Photo 4

Connect 45° fitting of #10 A/C hose to #10 bulkhead fitting



Photo 5

Connect #8 A/C hose 90° fitting with service port to compressor



Photo 6

Connect #8 A/C hose straight fitting to #8 condenser hardline



Photo 7



www.vintageair.com

Heater Hose & Heater Control Valve Installation

NOTE: Vintage Air systems use 5/8" connections. On engines equipped with 3/4" hose nipples, these will need to be removed and replaced with 5/8" nipples (not supplied). For water pumps with cast-in 3/4" heater outlet, a 3/4" x 5/8" reducer fitting (not supplied) or molded hose (Vintage Air part #099010) will need to be installed in the heater hose.

1. Remove the caps from the heater hardlines.
2. Route a piece of heater hose (not supplied) from the lower heater hardline to the water pump and secure the hose using (2) #12 hose clamps (See Photo 1, below).
3. Install a 5" piece of heater hose (not supplied) to the heater control valve and install it to the upper heater hardline, then secure it using (2) #12 hose clamps (See Photos 1 and 2, below). **NOTE: Ensure proper flow direction through the heater control valve (the flow direction follows the molded arrow on the valve) (See Figure 1, and Photo 2, below).**
4. Install a length of heater hose (not supplied) from the heater control valve to the intake manifold fitting. Secure the hose with (2) #12 hose clamps (See Photo 1, below).


Install 5" piece of heater hose to heater control valve

Route piece of heater hose from lower heater hardline to water pump



Install a length of heater hose from heater control valve to intake manifold fitting.

Photo 1

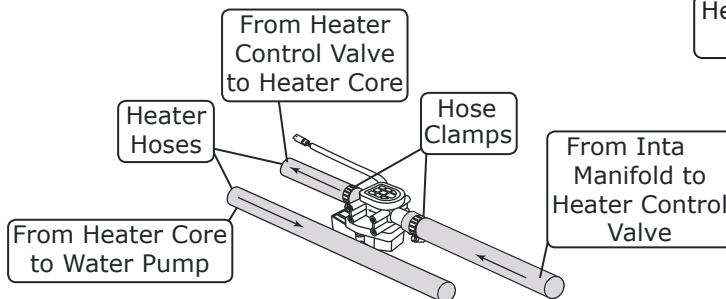

NOTE: Flow Direction Follows Molded Arrow on Valve.

Figure 1



#12 Hose Clamp

Photo 2



www.vintageair.com

Drain Hose Installation

1. Cut the supplied drain hose to 9" long, and install the 1/2" drain elbow, then attach the remainder of the drain hose to the other end as shown in Photo 1, below.
2. Install the drain hose through the 5/8" hole on the firewall cover, then onto the evaporator drain (See Photos 2 and 3, below). **NOTE: The 9" piece of hose attaches to the drain on the evaporator.**

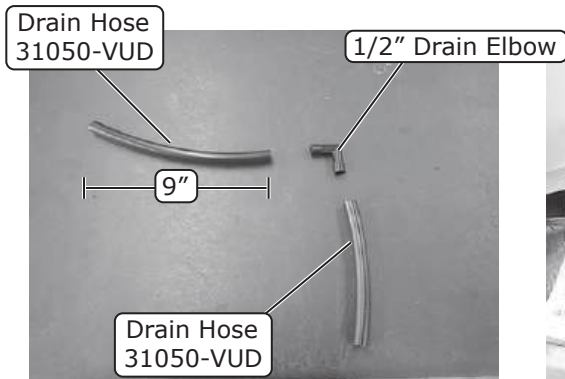


Photo 1



Photo 2

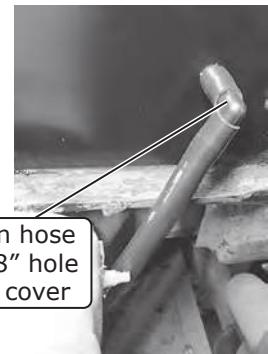


Photo 3



www.vintageair.com

Duct Hose Routing

NOTE: For the system to function optimally, the duct hoses must be routed as directly as possible, taking care to avoid kinks, sharp bends and unnecessary length. Vintage Air supplies duct hoses in continuous lengths that will need to be cut to size depending on application. Before cutting, familiarize yourself with the installation instructions and verify the routing will work with your application. For custom hose routing, additional hose may be needed and can be purchased from Vintage Air.

1. Stretch the duct hose until there is no slack, measure, mark and cut hose to size (See Photo 1, below).

Stretch, measure, mark and cut hose to size



Photo 1

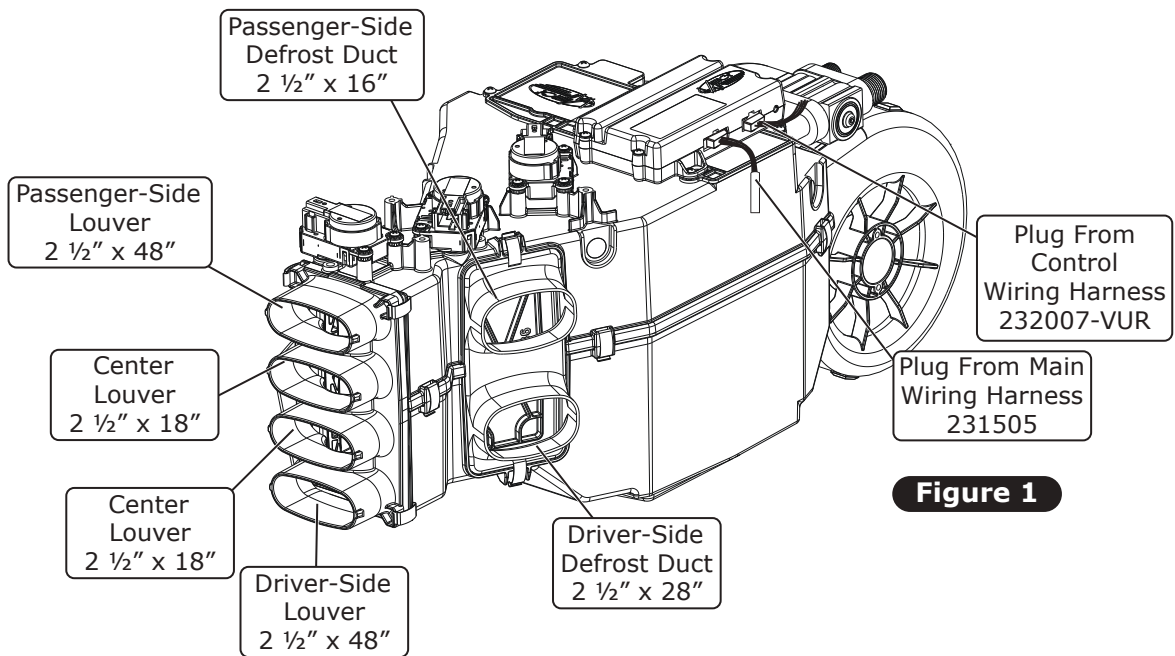


Figure 1

NOTE: Route wires so they are lower than plugs.



Route wires lower than plugs

NOTE: ECU must be placed away from water and humidity, and also be accessible for servicing. If relocating, connectors must be positioned towards the bottom.



Position connectors towards bottom



www.vintageair.com

Wiring Installation

NOTE: The heater hoses are shown on the following pictures below. To ease the wiring process, the heater hoses must be installed after routing all the wires through the wiring hole (heater hose installation shown on Page 24).

1. Locate the heater control valve plug on the main wiring harness (white/yellow/purple) (See Photo 1, below). Route it through the wiring opening hole on the firewall cover and into the engine compartment (See Photo 1, below).
2. Install a 5/8" grommet over the heater control valve plug and install on the firewall cover (See Photo 2, below).
3. Plug the heater control valve connector to the main wiring harness (See Photo 3, below).
4. Route the red, white, and blue wires from the main wiring harness through the 5/8" grommet and into the engine compartment (See Photo 4, below).
5. Route the blower power and ground wires (orange/white) through the 5/8" grommet and into the engine compartment (See Photo 5, below).
6. Enlarge the hole on the relay mounting tab to accommodate the #14 x 3/4" washer head screw installed on the kick panel cover (See Photo 6, below).
7. Select a suitable ground location for the white ground wire eyelet from the heater control valve harness, then secure it using a #12 x 1/2" self-tapping screw (See Photo 7, below).

Locate heater control valve plug on main wiring harness through (white/yellow/purple)



Route it through wiring opening hole on firewall cover and into engine compartment

Photo 1

Install 5/8" grommet over heater control valve plug and install on firewall cover

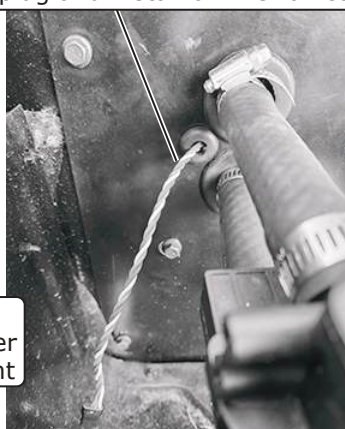


Photo 2

Plug heater control valve connector to main wiring harness



Photo 3

Route red, white and blue wires from main wiring harness through 5/8" grommet



Photo 4

Route blower power and ground wires (orange/white) through 5/8" grommet



Photo 5

Enlarge hole on relay mounting tab

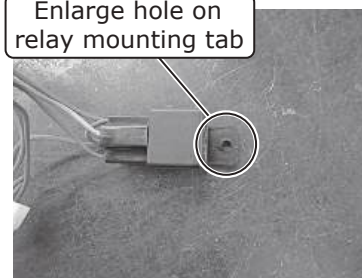


Photo 6

Attach white ground wire eyelet from heater control valve to suitable ground

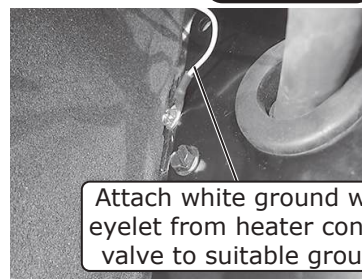


Photo 7



www.vintageair.com

Wiring Installation (Cont.)

8. Install the main wiring harness relay onto the kick panel cover with the remaining #14 x 3/4" washer head screw (See Photo 8, below). **NOTE: Main wiring harness relay in Photo 7, below, may not depict actual part included in kit.**
9. Route the violet power wire to a switched 12v power source on the fuse panel (See Photo 9, below). **NOTE: This requires a male fuse extension (not supplied).**
10. Connect the tan wire to the factory dash lights to enable control panel backlighting.
11. Connect the BSC wiring to the main harness (See Photo 10, below).
12. The ECU will be relocated for easy access and clearance of the evaporator module under the dash.
13. Install (2) pieces of Velcro on the back of the Magnum ECU (See Photo 11, below).
14. Plug the main wiring harness into the ECU (See Photo 12, below). Do not secure the ECU yet, the control panel plug must be connected first, shown in Control Panel Installation, Page 30.
15. Route the power and ground wires toward the battery.
16. Install the supplied heat shrink over the 12 AWG orange fuse holder assembly wire, and crimp it to the 12 AWG orange wire from the main wiring harness (See Photo 13, below and Quality Crimp Guidelines, Page 33).
17. Install the supplied heat shrink over the 16 AWG black fuse holder assembly wire, and crimp it to the 16 AWG red wire from the main wiring harness (See Photo 14, below and Quality Crimp Guidelines, Page 33).


Install main wiring harness relay to kick panel cover with remaining #14 x 3/4" washer head screw



#14 x 3/4" Washer Head Screw

Photo 8

Connect BSC wiring to main harness

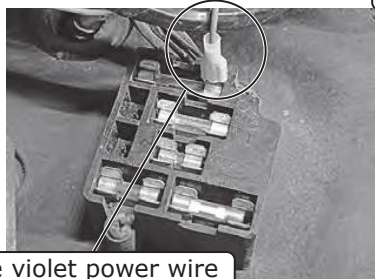

Route violet power wire to switched 12V power source on fuse panel

Photo 9

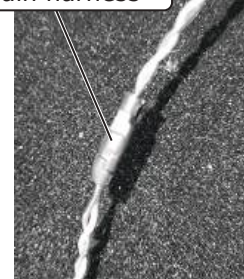


Photo 10

Install (2) pieces of Velcro on back of Magnum ECU

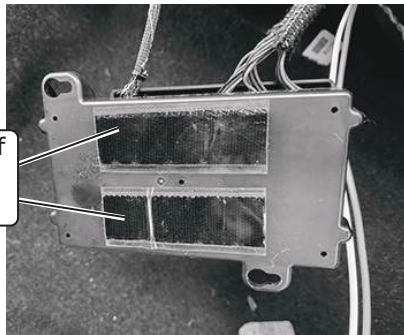



Photo 11

Plug main wiring harness into ECU



Photo 12

Install supplied heat shrink over 16 AWG black fuse holder assembly wire and crimp to 16 AWG red wire from main wiring harness

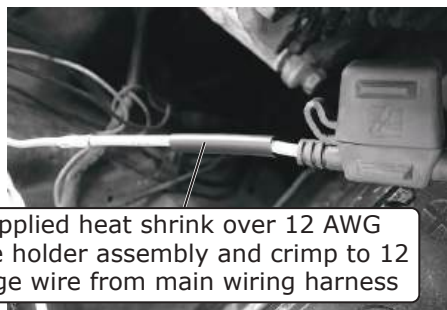

Install supplied heat shrink over 12 AWG orange fuse holder assembly and crimp to 12 AWG orange wire from main wiring harness

Photo 13



Photo 14



www.vintageair.com


Wiring Installation (Final)

18. Install fuses into the holders (See Photo 15, below).
19. Install the supplied heat shrink over the white ground wires, then crimp on the supplied eyelets (See Photos 16 and 17, below and Quality Crimp Guidelines, Page 33).
20. Connect the ground wiring eyelets to the negative battery terminal connector (See Photo 18, below).
21. Connect the positive wiring eyelets to the positive battery terminal connector (See Photo 19, below).
NOTE: Do not connect power until installation is completed.
22. Route the blue wire from the main wiring harness along the inner fender toward the drier, and secure it to the #6 A/C hose with the supplied tie wraps. Crimp the supplied 1/4" female terminal to the blue wire, and connect it to the safety switch on the drier (See Photo 20, below).
23. Connect the bullet terminal of the compressor lead to the compressor bullet terminal (See Photo 21, below).
24. Route the compressor lead wire along the #8 A/C hose. Secure the compressor lead wire to the #8 A/C hose with the supplied tie wraps. Connect the 1/4" female terminal of the compressor lead to the safety switch on the drier (See Photo 22, below).



Install fuses into holders

Photo 15

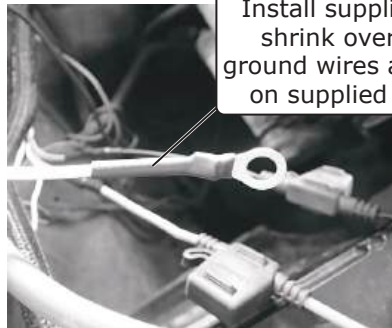

Install supplied heat shrink over white ground wires and crimp on supplied eyelets

Photo 16



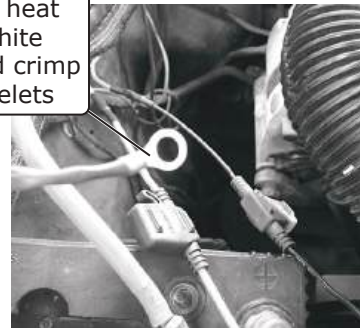


Photo 17

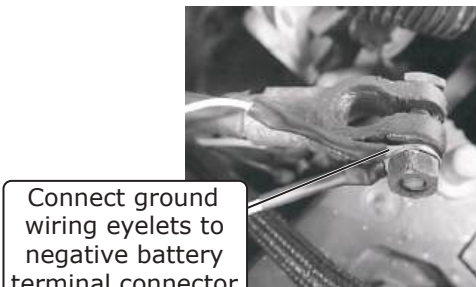

Connect ground wiring eyelets to negative battery terminal connector

Photo 18

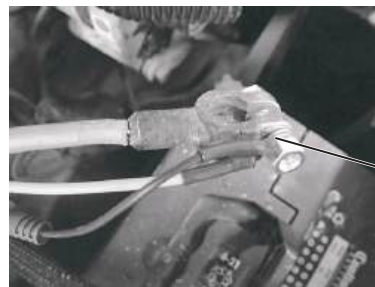


NOTE: Do not connect power until installation is completed.

Connect positive wiring eyelets to positive battery terminal connector

Photo 19

Crimp supplied 1/4" female terminal to blue wire, connect it to safety switch on drier

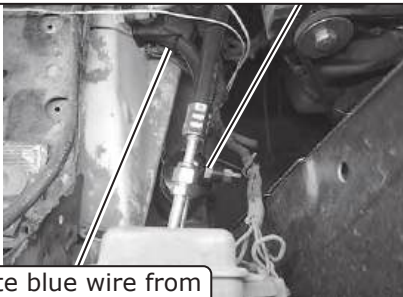

Route blue wire from main wiring harness along inner fender toward drier and secure it to #6 A/C hose with supplied 4" tie wraps

Photo 20



Connect bullet terminal of compressor lead to compressor bullet terminal

Photo 21

Secure compressor lead wire to #8 A/C hose with supplied tie wraps



Connect 1/4" female terminal of compressor lead to safety switch on drier

Photo 22



www.vintageair.com

Control Panel Installation

NOTE: Before installation, refer to the instructions included with the control panel.

1. Install the new Vintage Air control panel into the OEM control panel/radio bracket, and secure it using (4) #8 x 1/2" pan head screws (See Photo 1, below). Reinstall the bracket assembly into the dash opening using OEM hardware.
2. Plug in the OEM rear window/auxiliary tank switch connection, if equipped.
3. Route the Vintage Air control panel wiring to the ECU and connect the plug (See Photo 2, below).
4. Vintage Air recommends placing the ECU under the dash in front of the evaporator for easy access (See Photo 3, below). Clean the surface and install the ECU.
5. Reinstall the radio and plug in connections.

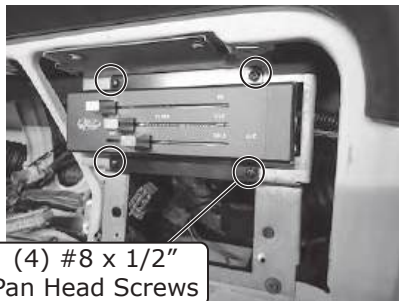


Photo 1



Photo 2

Place ECU under dash in front of evaporator for easy access





www.vintageair.com

Final Steps: Installation Check

Installation Check	
ITEM TO CHECK	Procedure
<input type="checkbox"/>	<p>ECU</p> <p>If no blinking is observed after 1 minute of turning the ignition on, go to the next check.</p> <p>If repetitive blinking is observed, go to the Advanced Diagnostics Section to diagnose.</p>
<input type="checkbox"/>	<p>Blower speed control</p> <p>Set the blower speed control to OFF, <u>confirm that the blower is off</u>.</p> <p>Position the blower speed control to LOW then MEDIUM and then HIGH. <u>At each setting confirm that the blower speed increases</u>, do this by feeling for the amount of air coming from the unit and hearing the blower speed increase.</p>
<input type="checkbox"/>	<p>Mode control</p> <p>Set the MODE control to the DASH position. <u>Confirm that air is being blown at the dash vents</u>.</p> <p>Set the MODE control to the FLOOR position. <u>Confirm that air is being blown at the floor vents</u>.</p> <p>Set the MODE control to the DEFROST position. <u>Confirm that all air is being blown from the defrost vents</u></p> <p>If heater lines are installed:</p> <p>Set the MODE control to the DASH position. Set the TEMP control to the MAX HEAT position. <u>Confirm that HOT air is coming from the dash vents</u>.</p>
<input type="checkbox"/>	<p>Temperature control</p> <p>If system is charged:</p> <p>Set the TEMP control to the MAX COOL position. <u>Confirm that COLD air is coming from the dash vents</u>.</p> <p>Also <u>confirm that the compressor "clicks" on</u> when adjusting the TEMP control from the MAX HEAT position to the MAX COOL position.</p>
<input type="checkbox"/>	<p>AC Indicator (If applicable)</p> <p>While the MODE control is set to the DASH position, and the TEMP control is set to the MAX COOL/MIN HEAT position, <u>confirm that the blue AC Indicator light is on</u>.</p>
<input type="checkbox"/>	<p>Backlight (If applicable)</p> <p>If your control panel has backlight capabilities and has been wired, turn the dash lamp on and <u>confirm that the AC panel's legend is lit</u>.</p>
<input type="checkbox"/>	<p>Fittings</p> <p>Verify AC and Heater fittings are all tight.</p>



www.vintageair.com

Glove Box Installation

1. Insert the glove box into the dash opening (left side first, clearing the glove box door tab, then rotate into place) (See Photo 1, below). Pull the glove box into the correct position against the back of the dash opening, then mark the (4) mounting holes and the (4) glove box door mounting holes (See Photo 2, below).
2. Remove the glove box and drill out marks using a 3/16" drillbit. Install (4) #8 U-nuts onto the glove box mounting holes as shown in photo Photo 3, below.
3. Reinstall the glove box into the dash opening and secure it using (4) #8 x 1/2" pan head screws (See Photo 4, below).
4. Reinstall the glove box door using the OEM hardware (See Photo 5, below).

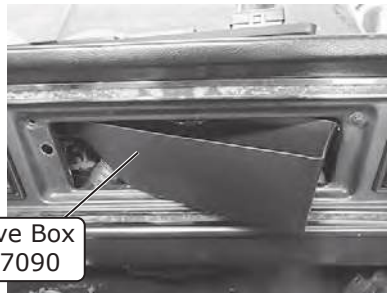


Photo 1

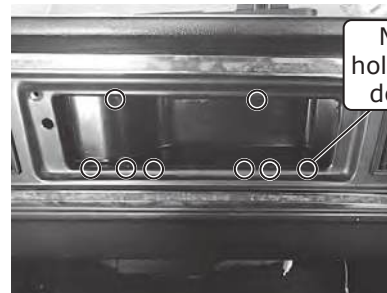


Photo 2

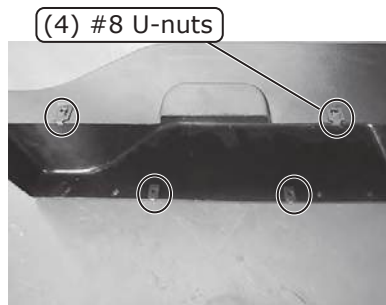


Photo 3

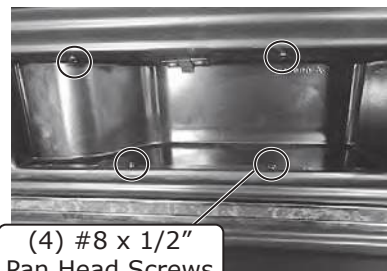


Photo 4

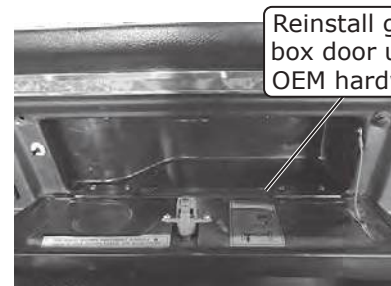


Photo 5

Final Steps

1. Connect the speedometer cable and connection plug to the gauge cluster and reinstall it into the dash using the OEM hardware.
2. Reinstall the gauge bezel connecting the driver side duct hose to the louver.
3. Reinstall any other previously removed items.
4. Fill radiator with at least a 50/50 mixture of approved antifreeze and distilled water. It is the owner's responsibility to keep the freeze protection at the proper level for the climate in which the vehicle is operated. Failure to follow antifreeze recommendations will cause heater core to corrode prematurely and possibly burst in A/C mode and/or freezing weather, voiding your warranty.
5. Double check all fittings, brackets and belts for tightness.
6. Vintage Air recommends that all A/C systems be serviced by a licensed automotive technician.
7. Evacuate the system for a minimum of 45 minutes prior to charging, and perform a leak check prior to servicing.
8. Charge the system to the capacities stated on Page 4 of this manual.
9. See the Operation of Controls procedures on Page 36 of this manual.

Quality Crimp Guideline

Acceptable strip length
(Some copper visible)

Crimped area is centered
on each side of splice

Bad strip length
(Too much copper visible)
Visible copper should be
just enough to ensure
clearance between splice
area and wire insulation

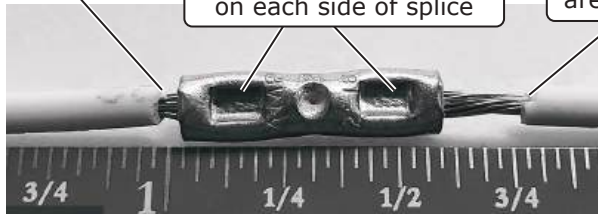


Photo 1

A good crimp requires
seam of butt splice to be
opposite of crimp die tooth



Photo 2

Good Ring Terminal Crimp

Bad Ring Terminal Crimp



Crimped
area is
opposite
of seam



Crimp
area is not
centered on
barrel

Excessive
wire "brush"

Crimp area
is on seam
(Should be
opposite)

Photo 3

Photo 4

Crimp
area is
centered
on barrel

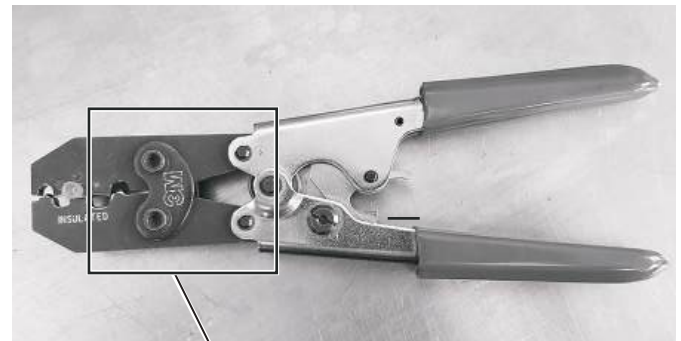


Photo 5




Photo 5a

Use a ratcheting crimp tool
for insulated barrel terminals
when crimping the provided
female insulated terminal.
Ensure terminal is inserted in
appropriate position before
crimping.



www.vintageair.com

Gen 5 Wiring Diagram

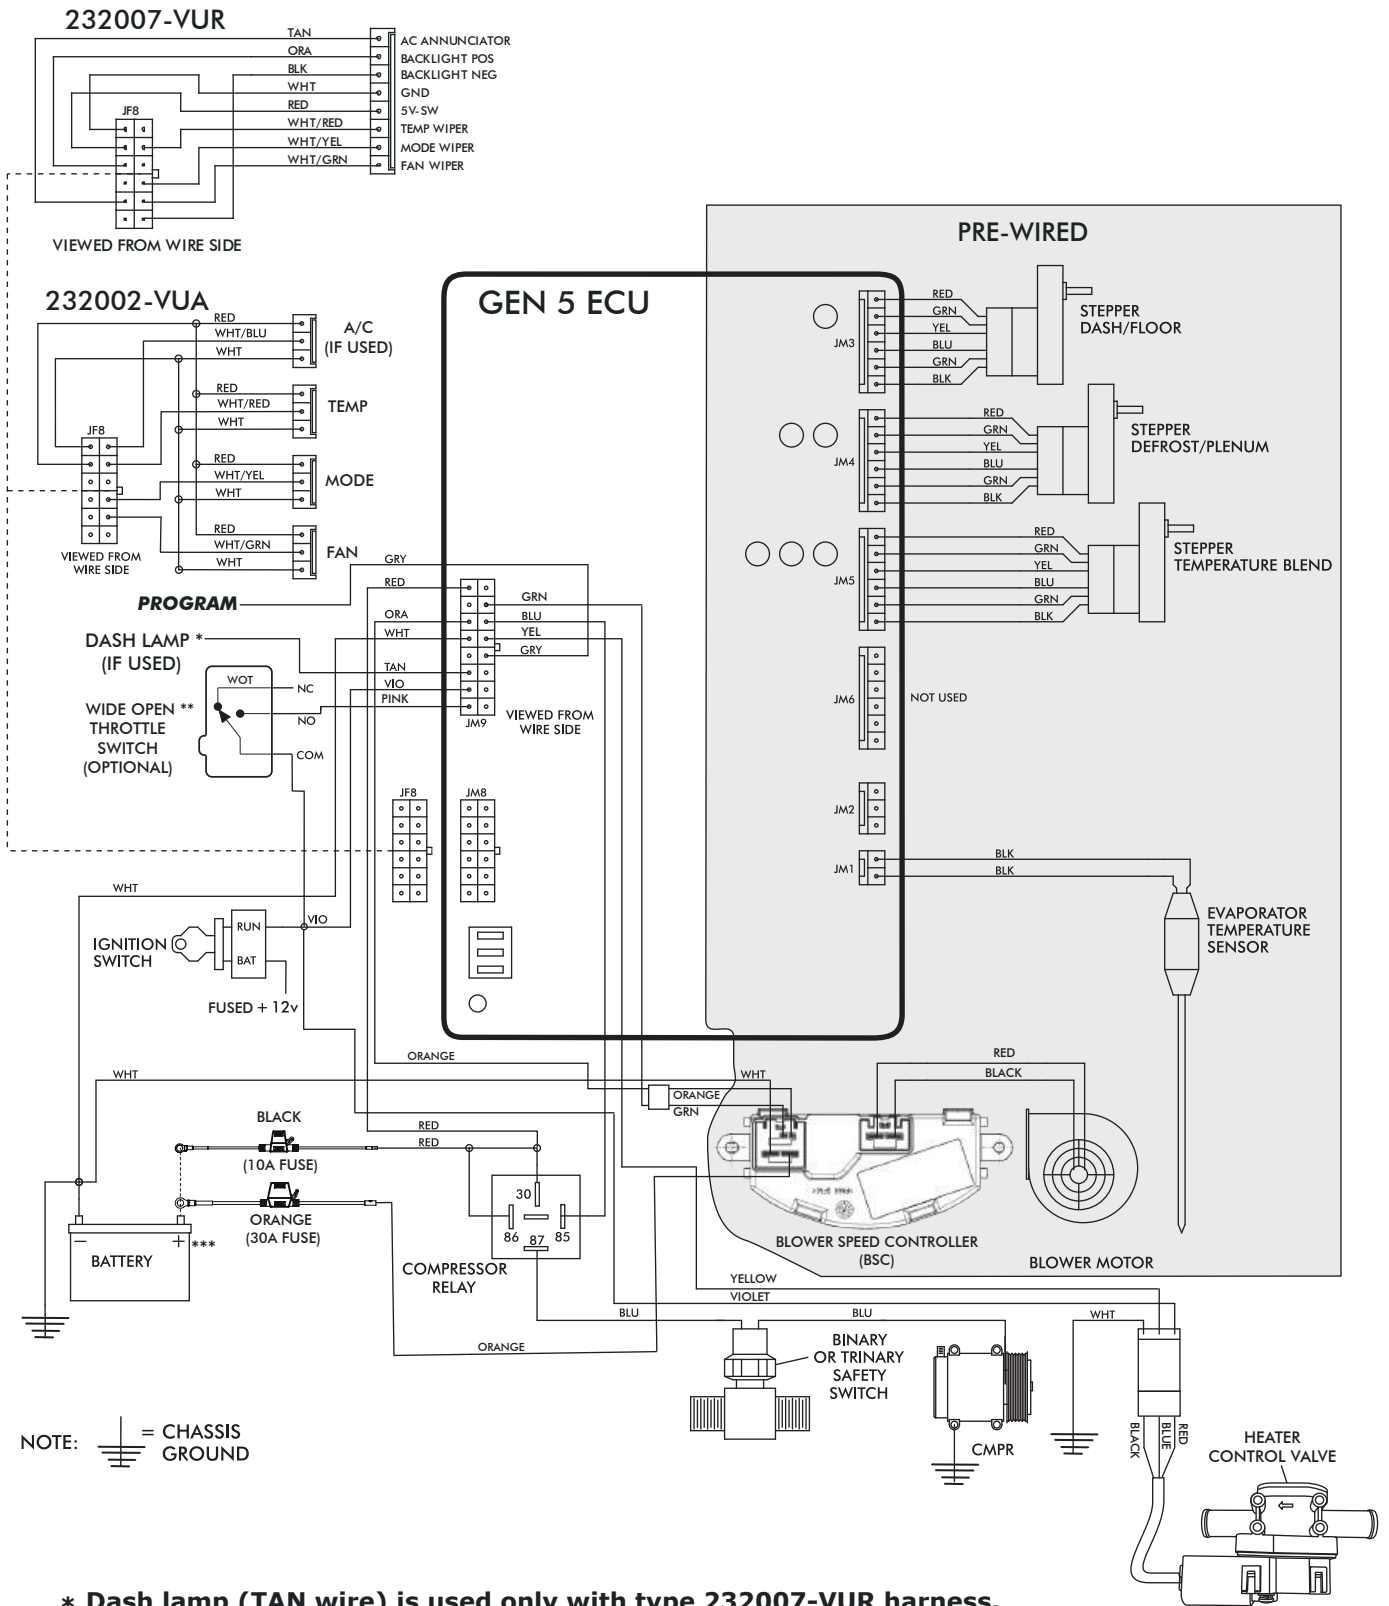

NOTE: = CHASSIS GROUND


- * Dash lamp (TAN wire) is used only with type 232007-VUR harness.
- ** Wide open throttle switch contacts close only at full throttle, which disables A/C compressor.
- *** Install fuse assemblies at or as near to the battery as possible.



www.vintageair.com

Gen 5 Wiring Instructions

WIRING HARNESS (231505) ↓

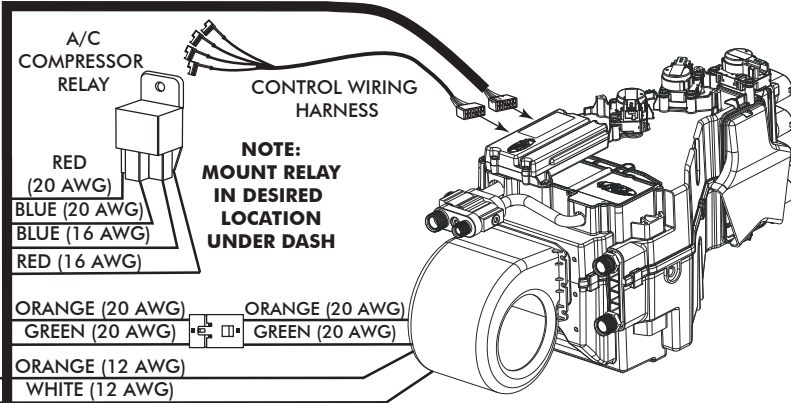

NOTE:
MOUNT RELAY
IN DESIRED
LOCATION
UNDER DASH


Ignition Switch:
Using provided butt splice (PN 226004), connect the 20 AWG violet wire to a 5A fused and switched 12V source such as Key On.

Wide Open Throttle Switch (Optional):
If a wide open throttle switch is required, connect the 20 AWG pink wire to a normally open switch that, when closed, connects a fused and switched 12V source to the pink wire. See Gen 5 wiring diagram for an example.




Dash Light (Optional):
If using a Vintage Air control panel with back light, connect the 20 AWG tan wire to the vehicle's dash back light 0-12V using provided butt splice (PN 226004).

WIRING HARNESS (232020) →

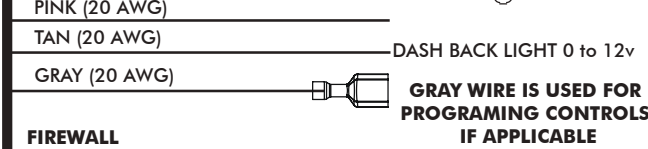


Heater Control Valve:
Connect the Violet/Yellow/White twisted branch with 3 position connector into the heater control valve connector. Ensure that the mating latch is fully seated.

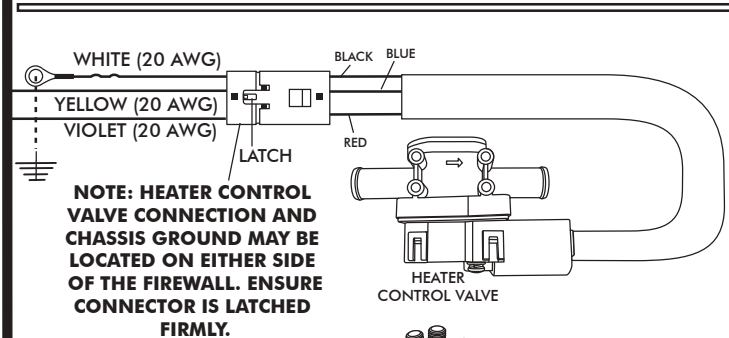

NOTE: HEATER CONTROL VALVE CONNECTION AND CHASSIS GROUND MAY BE LOCATED ON EITHER SIDE OF THE FIREWALL. ENSURE CONNECTOR IS LATCHED FIRMLY.

Binary/Trinary & Compressor:
Binary Switch: Terminate provided insulated female terminal (PN 23172-VUW) to the blue 16 AWG wire. Connect as shown.
Trinary Switch: Connect according to trinary switch wiring diagram.

WIRING HARNESS (232020) →

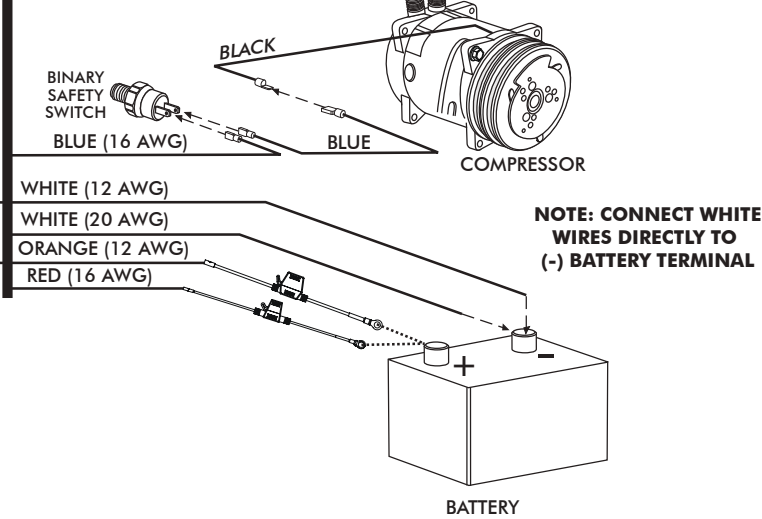

NOTE: CONNECT WHITE WIRES DIRECTLY TO (-) BATTERY TERMINAL

Battery Connections:
ECU Ground: Terminate provided ring terminal (PN 226110) to 20 AWG white wire from the 231505 wire assembly and install at battery.
ECU PWR: Terminate provided fuse assembly with black leads (PN 233012) to the 16 AWG red wire from the 231505 wire assembly. Install provided 10A Red Mini Fuse (PN 226118). Install at battery.
Blower Speed Controller (BSC) Ground: Terminate provided ring terminal (PN 226111) to 12 AWG white wire from the 232020 wire assembly and install at battery.
Blower Speed Controller (BSC) PWR: Terminate provided fuse assembly with orange leads (PN 233008) to the 12 AWG orange wire from the 232020 wire assembly. Install provided 30A Green ATO/ATC Fuse (PN 226125). Install at battery.



www.vintageair.com

Operation of Controls

On Gen IV and Gen 5 systems with three lever/knob controls, the temperature control toggles between heat and A/C operations. To activate A/C, move the temperature lever/knob all the way to cold and then back it off to the desired vent temperature. For heat operation, move the temperature lever/knob all the way to hot and then adjust to the desired vent temperature. The blower will momentarily change speed, each time you toggle in and out of heat and A/C operations, to indicate the change.

Blower Speed


This lever/knob controls blower speed, from OFF to HI.

Mode Control

This lever/knob controls the mode positions, from DASH to FLOOR to DEFROST, with a blend in between.

Temperature Control

This lever/knob controls the temperature, from HOT to COLD.

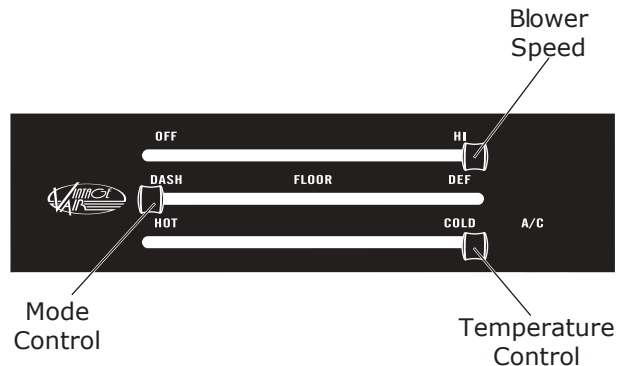

A/C Operation

Blower Speed

Adjust to desired speed.

Mode Control

Adjust to desired mode position (DASH position recommended).

Temperature Control

For A/C operation, adjust to coldest position to engage compressor (adjust between HOT and COLD to reach desired temperature).



Heat Operation

Blower Speed

Adjust to desired speed.

Mode Control

Adjust to desired mode position (FLOOR position recommended).

Temperature Control

For maximum heating, adjust to hottest position (adjust between HOT and COLD to reach desired temperature).



Defrost/De-fog Operation

Blower Speed

Adjust to desired speed.

Temperature Control

Adjust to desired temperature.

Mode Control

Adjust to DEFROST position for maximum defrost, or between FLOOR and DEFROST positions for a bi-level blend (Compressor is automatically engaged).





www.vintageair.com

Troubleshooting Guide

This printed troubleshooting guide is our basic guide that covers common installation problems. To see our advanced diagnostics and troubleshooting guide, please refer to the following page for instructions on how to download the complete guide.

WARNING: While troubleshooting the system, never probe connector terminals from the front mating side, only back probe.
WARNING: While troubleshooting the system, never use automotive check lights.

Symptom	Condition	Checks	Actions	Notes
1. Blower stays on high speed with ignition on.	No other functions work.	Check for damaged pins or wires in the control panel wire assembly and mating header at ECU.	If found damaged, replace wire assembly or ECU.	If fuse continues to blow, there is a serious problem in the wiring. Check all wiring and ensure the wire is not damaged and shorting out along its route.
	All other functions work.	Check for a bad ECU GND. Check for damaged pins or wires in the control panel wire assembly and mating header at ECU. Check if Blower power fuse is blown. Check for a bad ECU GND.	If found damaged, replace wire assembly or ECU. Replace fuse. Repair connection.	
2. Compressor will not turn on (All other functions work).	System is not charged.	System must be charged for compressor to engage.	Charge system.	Danger: Never bypass safety switch with engine running. Serious injury can result. To check for proper pot function, check voltage at white/red wire. Voltage should be between 0V and 5V, and will vary with pot lever position. Disconnected or faulty thermistor will cause compressor to be disabled.
		Check for faulty A/C potentiometer or associated wiring (not applicable to 3-pot controls).	Check continuity to ground on white control head wire. Check for 5V on red control head wire.	
	System is charged.	Check for disconnected or faulty thermistor.	Check 2-pin connector at ECU housing.	
3. Compressor will not turn off (All other functions work).	Compressor will not turn off (All other functions work).	Check for faulty A/C potentiometer or associated wiring.	Repair or replace pot/control wiring.	Red wire at A/C pot should have approximately 5V with ignition on. White wire will have continuity to chassis ground. White/Red wire should vary between 0V and 5V when lever is moved up or down.
		Check for faulty A/C relay.	Replace relay.	



www.vintageair.com

Troubleshooting Guide (Cont.)

Symptom	Condition	Checks	Actions	Notes
4. System will not turn on, or runs intermittently.	Works when engine is not running; shuts off when engine is started	Noise interference from either ignition or alternator.	Install capacitors on ignition coil and alternator. Ensure good ground at all points. Relocate coil and associated wiring away from ECU and ECU wiring. Check for burned or loose plug wires.	Ignition noise (radiated or conducted) will cause the system to shut down due to high voltage spikes. If this is suspected, check with a quality oscilloscope. Spikes greater than 16V will shut down the ECU. Install a radio capacitor at the positive post of the ignition coil (see radio capacitor installation bulletin). A faulty alternator or worn out battery can also result in this condition.
	Will not turn on under any conditions.	Verify connections on power lead, ignition lead, and both white ground wires. Verify battery voltage is greater than 10 volts and less than 16 while engine is running.	Check for power at ECU, and confirm ignition is being applied to ECU properly. Verify proper meter function by checking the condition of a known good battery.	
5. Loss of mode door function.	No mode change at all.	Check for damaged mode switch or potentiometer and associated wiring.		
	Blower turns on and off rapidly.	Battery voltage is at least 12V. Battery voltage is less than 12V.	Ensure all system grounds and power connections are clean and tight. Charge battery.	System shuts off blower at 10V. Poor connections or weak battery can cause shutdown at up to 11V.
7. Erratic functions of blower, mode, temp, etc.		Check for damaged switch or pot and associated wiring.	Repair or replace.	

Advanced Diagnostics and Troubleshooting Guide

If after referencing the Troubleshooting Guide, the issue is not resolved, move to The Advanced Diagnostics and Troubleshooting Guide that covers the following:

- **ECU Diagnostics Codes**
 1. **ECU Blink Sequence**
 2. **Firmware Version Number**
 3. **ECU Model Number**
 4. **ECU Start-Up Blink Sequence**
 5. **Diagnostic Codes**
- **Complete Advanced Troubleshooting Guidelines**

Access the latest version of the Advanced Diagnostics and Troubleshooting Guide by scanning the following QR code on your mobile device:



You can also access the guide by typing the following address into your web browser:

https://www.vintageair.com/instructions_pdf/905000.pdf



www.vintageair.com

Packing List: Evaporator Kit (755685)

No.	Qty.	Part No.	Description
1.	1	765200	Gen 5 Magnum Max Module with 404 ECU
2.	1	795685	Accessory Kit


Checked By: _____
Packed By: _____
Date: _____

1



**Gen 5 Magnum Max
Module with 404 ECU
765200**

2

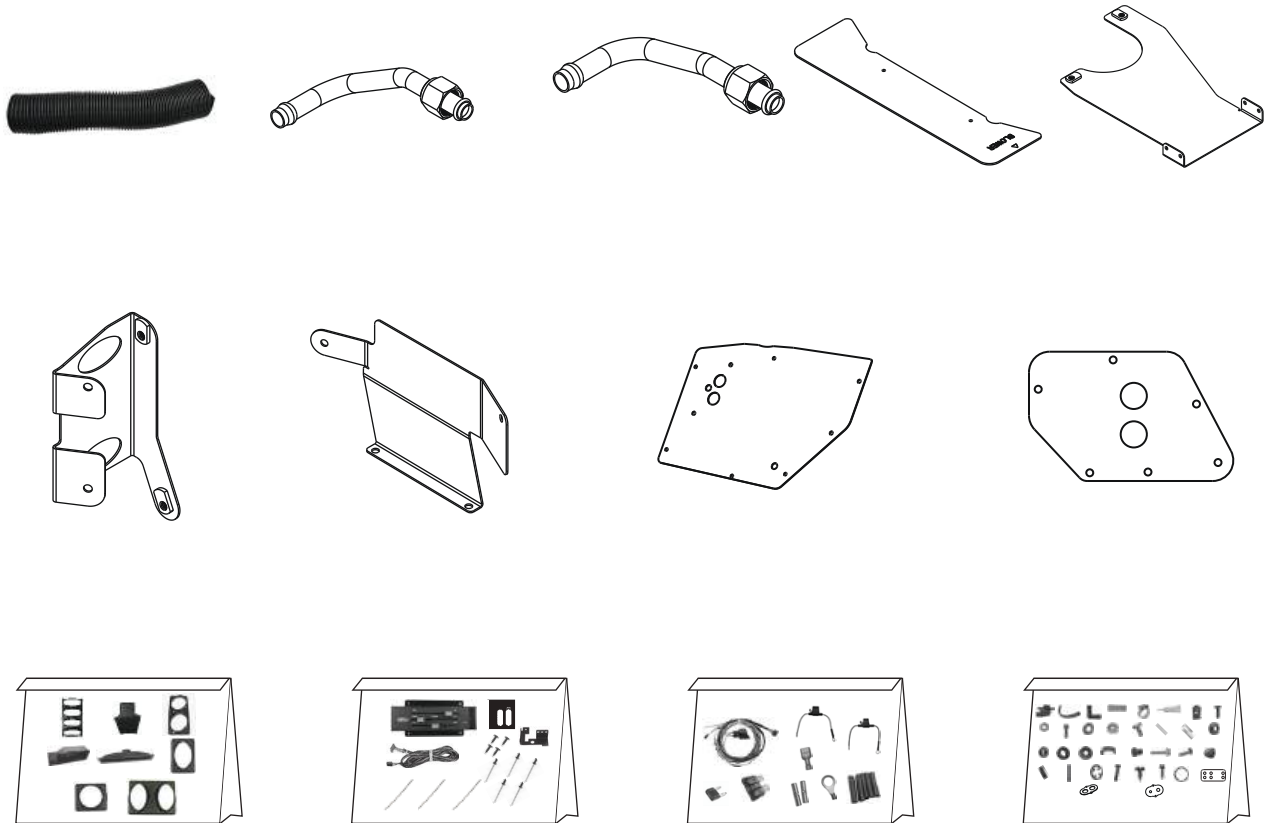

**Accessory Kit
795685**

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**