


INSTRUCTIONS


Difficulty

Part Number:


TOOLS REQUIRED	PARTS INCLUDED


PAGE 1

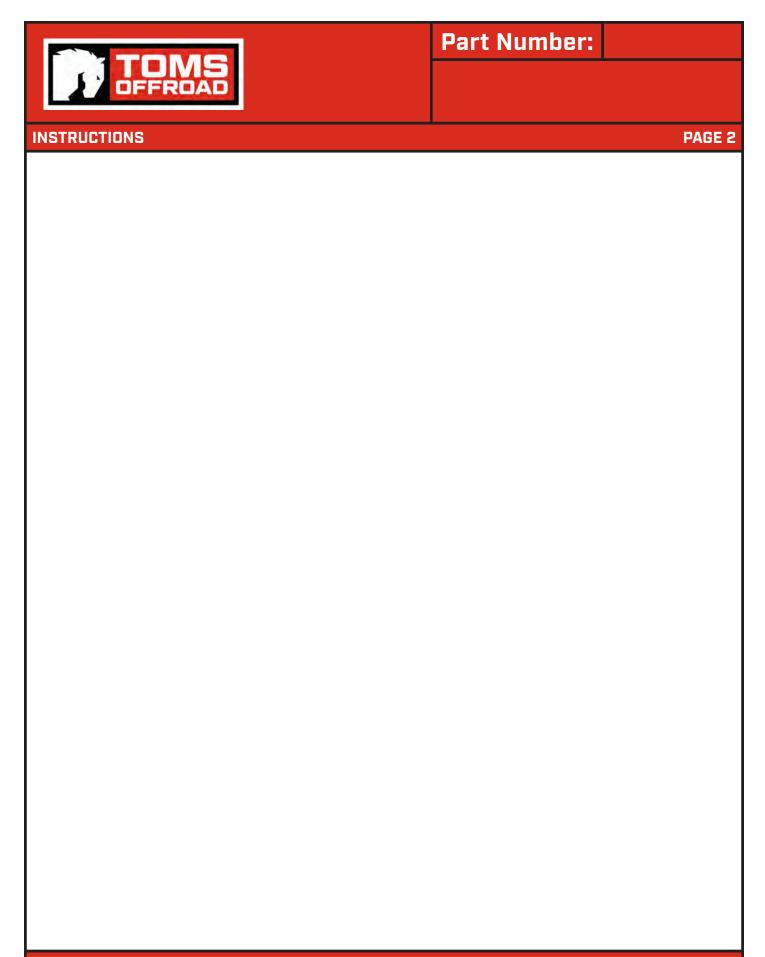

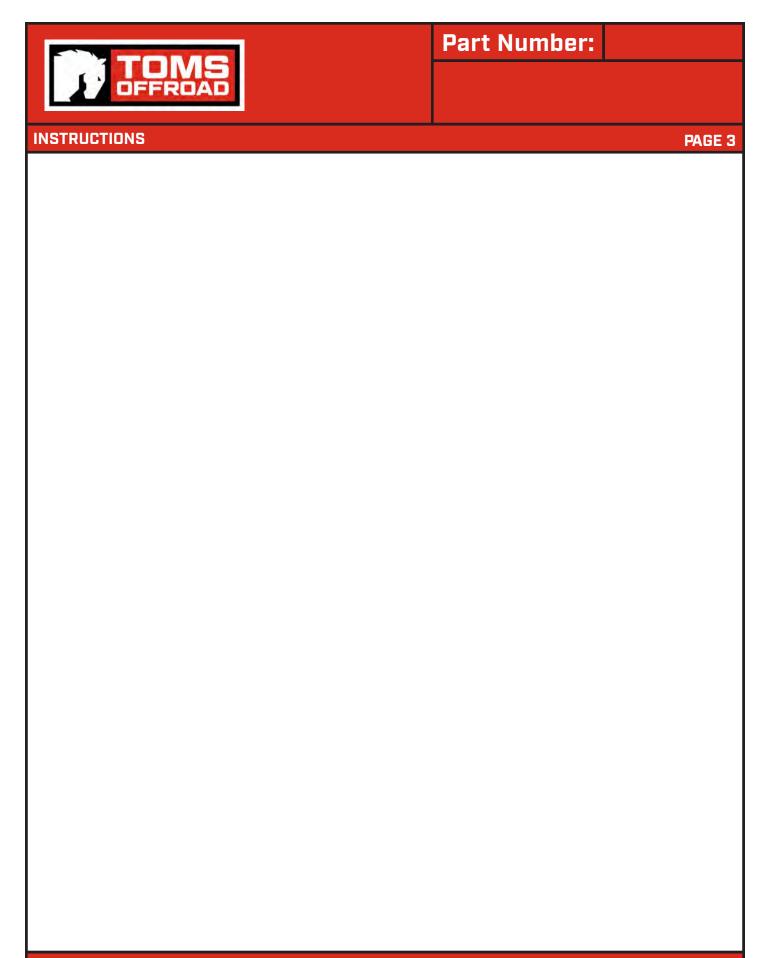



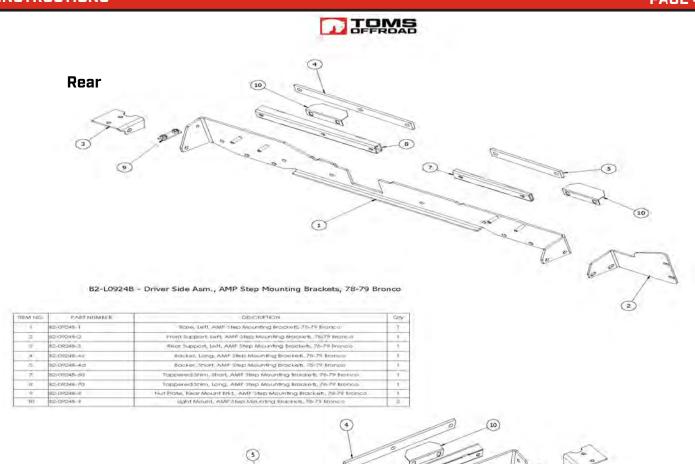

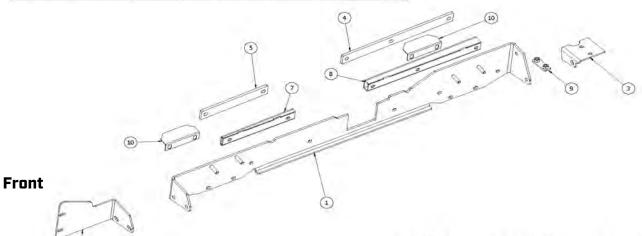

B2-R0924B -	Passenger Side Asm	. AMP Step Mountin	g Brackets, 78-79 Bronco

TEW.	PART NUMBER	DESCRIPTION	Qh
1	60-09248-im	Base Right, AMP Step Mounting Brackets, 76-79 Bronca	1
2	52-09246-2m	Pront Support, Right. AMP Step Mounting Brackets, 78-79 branco	Ť
3	62-09\$46-3m	Rear Support, Right, AMP Step Mounting Brackets, 78-79 franco	1
4	82-09248-4c	Backer, Long. AMP-Step Mounting Brackets, 78-79 Bronco	1
5	62-0924B-4d	Backer, Short, AMP Step Mounting Brackets, 78-79 Branco	1
7	62-07248-50	Toppered Stim, Short, AMP Step Mounting Brackets, 78-79 Bronco	1
8-	62409248-70	Tappered Stim: Long. AME Step Mounting Brackets, 78-79 Bratica	1
(9)	82-09246-5	Not flate, Real Mount Birt., AMP Step Mounting Blackets, 78-79 Monac	1
ID:	82-09048-9	Light Mount, AMF Step Mounting Practice, 78-75 Branco	8

Fig 2a







Thick Part Of Shim No Shim Front

Fig. 2b

















