

INSTALLATION INSTRUCTIONS

1969.5-1977 Ford Bronco Intermittent Wiper Module

Congratulations on your purchase of this Intermittent Wiper Module. Adding this module to a factory two-speed wiper switch/motor gives you three additional wiper settings: one swipe every eight seconds, once every five seconds, and once every three seconds. This wiper is designed to work with Ford vehicles with two-speed, non-hiding wiper motors.

Parts Included in this Kit

- | | |
|--------------------------------|--------------------|
| 1-Controller Unit with Harness | 1-Small crimp ring |
| 2-Orange wire assembly | 2-zip ties |
| 1-Green wire assembly | |

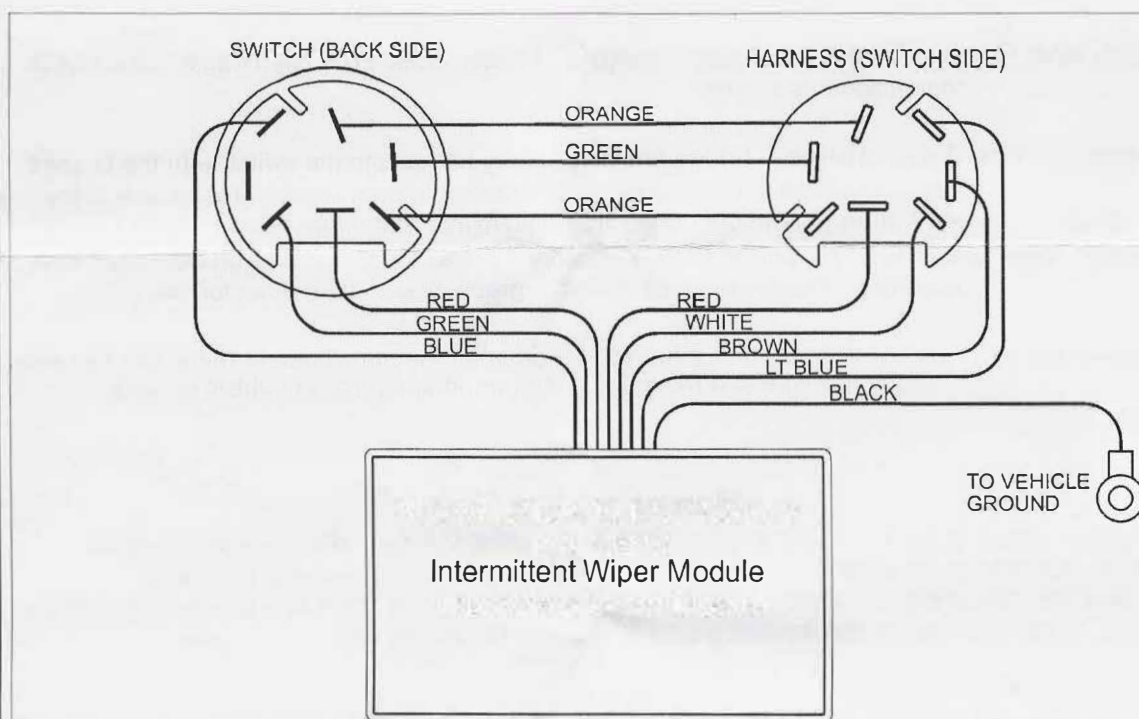


Figure 1

Electrical Connections

Figure 1 summarizes the connections necessary. The Intermittent Wiper Module needs connection to a good ground. It also needs to connect between the dash-mounted switch and its harness.

Brown Wire —Connect this wire to factory harness as shown. There should be a factory black wire in this cavity.

Light Blue Wire — Connect the Light Blue wire from the module to the factory connector as shown. There should be a factory Light Blue wire in this cavity.

White Wire — Connect the white wire from the module to the factory connector as shown. There should be a factory White wire in this cavity.

Red Wires - Connect the Red wire with the male spade connector to the factory harness as shown. There should be a factory Red wire in this cavity. The second Red wire from the module (with a female terminal attached) should attach to the factory switch as shown.

Blue and Green Wires — Connect the Blue and Green wires from the module to the switch connections as shown.

Orange Wire Assemblies — Bridge from the factory harness to the switch with the Orange wire assemblies in two locations. There should be a factory orange wire in the one harness connector cavity and white/black wire in the other.

Green Wire Assembly — Bridge from the factory harness to the switch with the Green wire assembly. There should be a factory green wire in the connector cavity.

Black Wire - Connect this wire to a good vehicle ground. The small ring terminal can be used to attach this wire to a mounting bolt or another source of vehicle ground.

Mounting the Unit

The Intermittent Wiper Module is intended to mount behind the dash cluster, near the wiper switch, but may be mounted in any location where the electrical connections are easily accessible. Mounting in a weatherproof location is recommended. Use two self-tapping screws, rivets, or zip-ties through the mounting tabs to securely mount the unit.

Operation

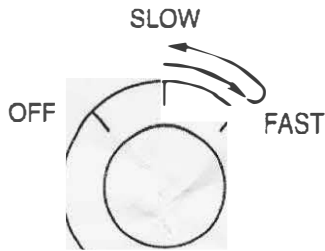


Figure 2: Advancing from one setting to the next

Cycle from: Off--8sec delay--5sec delay--3sec delay--continuous slow--continuous fast

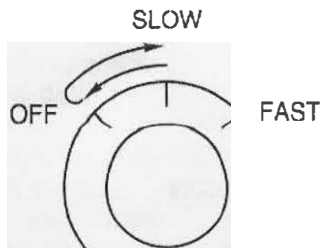


Figure 3: Stepping back through settings

Cycle from: continuous fast--continuous slow--3sec delay--5sec delay--8sec delay--Off

The factory switch has three positions: off, slow, and fast. The Intermittent Wiper Module uses the factory switch to select between several modes of operation. The "off" and "fast" positions retain their functions while the "slow" position becomes a center "neutral point". Much like paddle shifters can shift a transmission up or down one gear at a time, moving the switch off the center neutral position and back will cause the module to move up or down in its sequence (depending on which side of center you move it). Moving the switch from the center position to the "fast" position and then back to center (within about a half a second) will advance the operation one selection (refer to figure 2). Moving the switch from the center position to the off position and back to the center (again within about a half a second) will step back the operation one selection (refer to figure 3). Within the center position, you can operate the wipers once every 8 seconds, once every 5 seconds, once every 3 seconds, or continuous stock-slow setting.

When you first turn on the wipers by moving the switch from off to center, the wipers will start operating once every 8 seconds. Quickly moving the switch to the fast position and back to the center will cause the wipers to operate once every 5 seconds. Repeating this operation again will cause them to operate once every 3 seconds. One more time will advance them to the continuous "stock slow" setting. Just as moving the switch from center to fast and back will advance one setting, moving the switch from center to off and back will drop the wipers down one notch. At any time, moving the switch to the fast position and leaving it there will advance the mode directly to the "stock fast" operation. Likewise, moving the switch to the off position and leaving it there will change the mode immediately to off.

Troubleshooting

There are 14 connections which must be correct for this module to operate properly. Before tearing into the connections at the switch and motor, check these items:

1. Make sure the power (both Red wires and Orange wire assemblies) connections are secure.
2. Make sure the ground (Black wire) connection is secure. Make sure the ground point is not rusty or otherwise questionable.
3. Make sure the wires to the factory harness are in the correct position (check the wire colors).